



WHEEL CHOCK INSTRUCTIONS NR23



Parts List:

(1) Tire Stop



(1) Tire Stop Upright




(1) Right Wheel Chock Base Plate




(1) Left Wheel Chock Base Plate



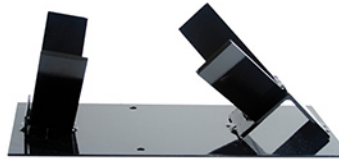

(1) Stabilizer Bar




(1) Rear Cradle


 (6) 5/16" x 18 x 3/4" Bolt

 (6) 5/16" Nut

 (2) 1/4" x 20 x 3/4" Machine Screw

 (2) 1/4" Lock Nut

Assembly:

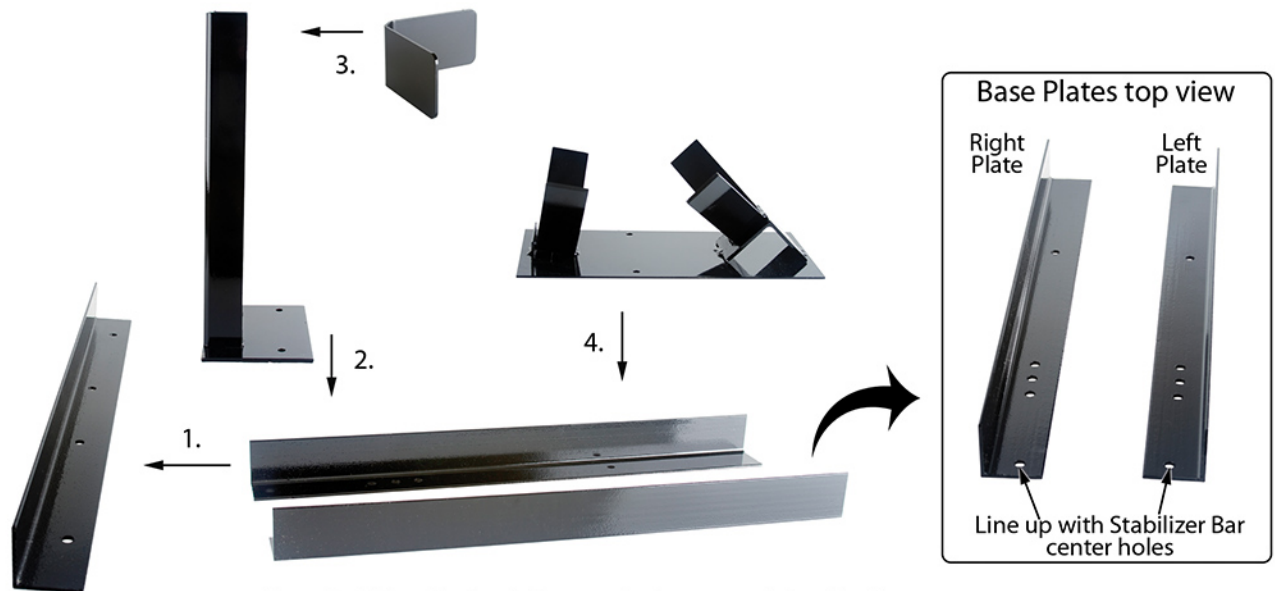

Note: Bolt heads should be on the bottom of the chock.

1. Align the two Wheel Chock Base Plates with the Stabilizer Bar center holes. Secure with (2) 5/16" x 18 x 3/4" bolts and (2) 5/16" nuts, facing upward.

2. Lower the Tire Stop Upright onto the front of the Wheel Chock Base assembly. Align with the holes that provide the optimal fit for the motorcycle tire that will be used with the wheel chock (See Standard Tire Stop Settings Chart). Secure with (2) 5/16" x 18 x 3/4" bolts and (2) 5/16" nuts, facing upward.

3. Insert the Tire Stop into the top of the Tire Stop Upright. Secure with (2) 1/4" x 20 x 3/4" Machine Screws and 1/4" Lock Nuts.

4. Lower the Rear Cradle into the back of the Wheel Chock Base assembly. Align holes and secure with (2) 5/16" x 18 x 3/4" bolts and (2) 5/16" nuts, facing upward.



WHEEL CHOCK INSTRUCTIONS NR23



ERT CHOCKS, LLC - NR23 TRAILER WHEEL CHOCK:

Standard Tire Stop Settings

Front Tire	Width - Diameter	Position	Additional Setting
Front	80, 90 - 21"	1	2
Front	100, 120 - 21"	1	2
Front	100 - 18"	2	3
Front	100 - 19"	1	2
Front	120 - 17"	2	3
Front	130 - 160"	2	3
Front	140 - 17"	3	2
Front	150 - 17"	3	2
Front	150+	3	2
Front	14" - 15"	3	2

Setting one (1) is closest from the rear platform

SAFETY FIRST: CAUTION: WARNING: Be certain that all fasteners are fully tightened. Always make sure that the unit is fully assembled. Hardware provided should be fully tightened prior to use. Periodically check that all fasteners are secure. Do not use or mount the unit on any surface or structure of inadequate strength to support. EasyRide Trailers and Accessories, Inc (ERT) is not responsible for any damage incurred by exceeding this product's limitations in structure and or functionality.

LIMITATION of LIABILITIES:

Except as expressly provided in this Limited Warranty, (ERT) MAKES NO AND DISCLAIMS ALL WARRANTIES, REPRESENTATIONS AND GUARANTEES (WHETHER EXPRESS, IMPLIED OR STATUTORY), INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL THE DURATION OF ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE BE LONGER THAN THE LIFETIME OF THE PRODUCT OR THE PERIOD OF OWNERSHIP BY THE ORIGINAL PURPOSE (NON - TRANSFERABLE WARRANTY). SOME STATES DO NOT ALLOW EXCLUSIONS OF IMPLIED WARRANTIES, EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATION ON THE LENGTH OF AN IMPLIED WARRANTY. This Limited Warranty is the only express Warranty provided by (ERT). No employee, representative or agent has authority to assume or incur on behalf of (ERT) any obligation or liability in place of or in addition to this Limited Warranty. This Limited Warranty provides specific legal rights. Other rights, which may vary from state to state, may be available.