



 
Hitch-Mounted Deer/Snowmobile Swivel Hoist

Instructions for Part # HITCH-HOIST-SWIVEL

General Guidelines

- It is the user's responsibility to read and follow all instructions.
- Keep these instructions with the product at all times and review before each use.
- It is the responsibility of this product's owner to furnish the instructions to any person that borrows or purchases the product.
- Inspect the product before use to ensure it is assembled properly and all parts are in safe working order and free of defects.
- Never modify this product in any way.
- All circumstances cannot be addressed in these instructions. Please use common sense and practice general safety measures when using this product.
- Parts and/or instructions are subject to change without notice.
- **Note:** The swiveling mechanism uses a two-piece single row tapered roller bearing. If this bearing comes apart, fit the two pieces back together and fix into place with the Center Support.

Parts

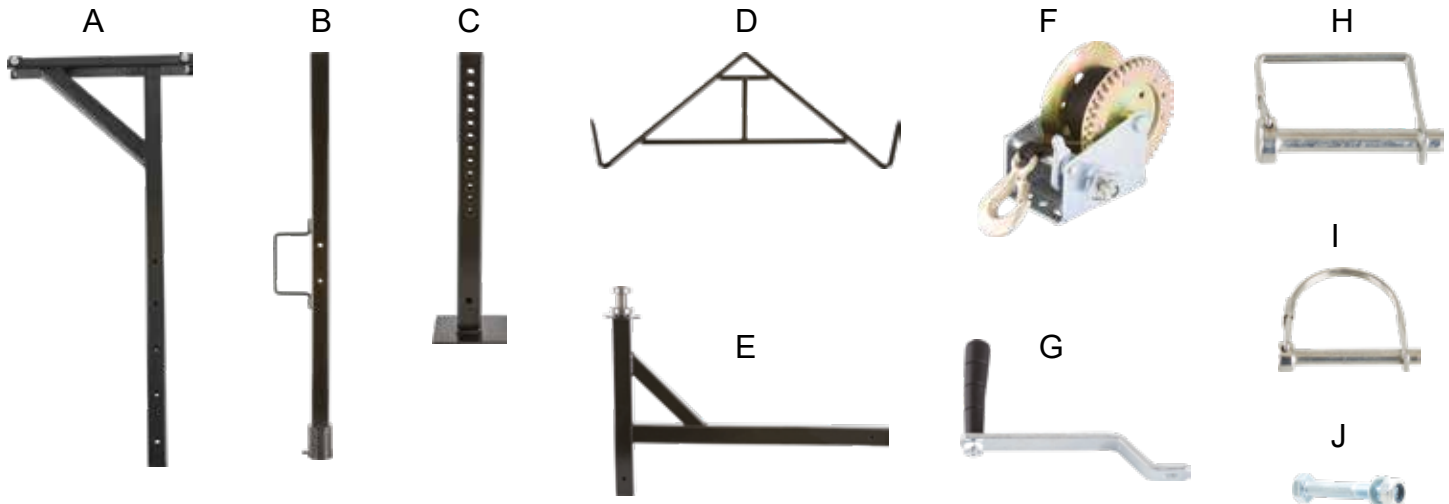

Part	Description	Quantity
A	Arm Support	1
B	Center Support	1
C	Support Foot	1
D	Gambrel	1
E	Hitch Tube	1


Part	Description	Quantity
F	Winch	1
G	Winch Handle	1
H	Large Pin Clip	3
I	Small Pin Clip	1
J	Long Bolt, Washer, and Nut	2

Assembly

1. Insert the support foot into the hitch tube and secure it in place with a large pin clip. The support foot has multiple hole positions for hitch height adjustment and is designed to transfer the load capacity from the hitch receiver to the ground.




 2. Slide the center support over the hitch tube assembly from Step 1, then secure in place with the small pin clip. When the small pin clip is removed, the hoist will be able to spin 360 degrees around this point (4 lockable positions).

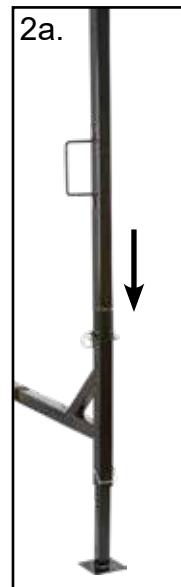

3. Attach the winch handle and unwind the black lift strap completely.

Once the lift strap is unwound, bolt the winch with two long bolts to the center support.

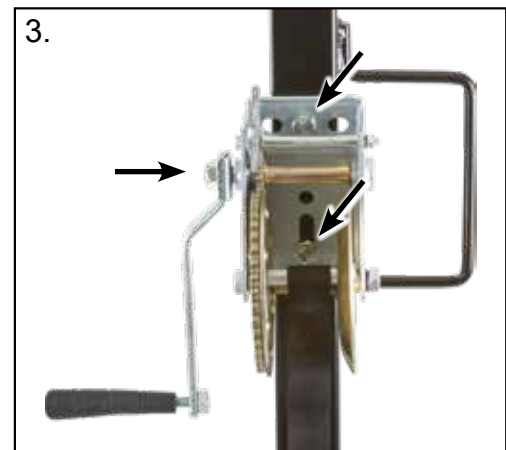

4. Insert the support arm into the center support and secure in place with the last two large clip pins.





5. Loosen both pulleys from the support arm and remove the top plates.



6. Straighten the lift strap from the winch. Rest the strap on the rear and front pulleys with the hook end running off the front of the support arm. Pull out all the slack. Re-apply the top plates and tighten up both pulleys.



7. (Optional) For use as a deer hoist - Complete assembly by snapping the gambrel into the lift strap hook.

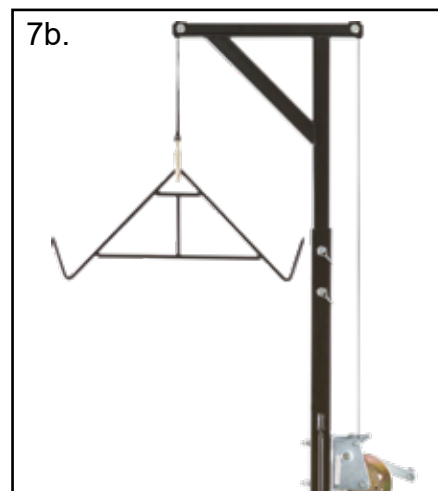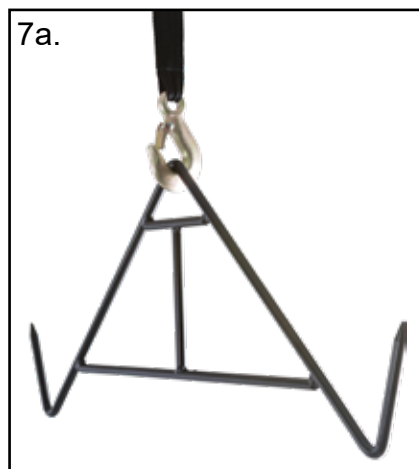

Product Warranty and Liability

GENERAL PRODUCT WARRANTY: Products purchased from the Authorized Dealer (original place of purchase) or Merchant (“Dealer”) will be free of defects in material and workmanship at the time of receipt, and will meet the specifications stated at the place of purchase transaction or online at the Dealer’s website, under normal use and service when correctly installed, operated and maintained. This product warranty is effective for the period of time stated below, unless otherwise stated in the product instructions or depicted in the product advertisement. **All Authorized Dealer warranties are NON-TRANSFERABLE** and cover only the original end purchaser. This limited warranty does not cover products purchased through non-authorized dealers. Non-authorized dealer receipts are not accepted for warranty verification.

*****Warranty claims must be made directly to the original place of purchase.*****

WARRANTY PERIOD: This warranty remains in force for one year from the date of the product’s accepted delivery. The Authorized Dealer offers a one year manufacturer’s warranty for most products unless otherwise specified on the product advertisement.

WARRANTY SERVICE: The Authorized Dealer will replace any defective or malfunctioning part at no charge, including payment of the shipping costs of parts or replacement product to and from the manufacturer. The purchaser is responsible for labor charges. If the product does not meet specifications as depicted in the advertisement, the Authorized Dealer will refund the full purchase price of the product.

Questions regarding the warranty on a specific product and warranty claims should be directed to the Authorized Dealer with whom the purchase transaction was made.

WARRANTY LIMITATIONS: The above warranty does not apply to products that are repaired, modified or altered by any party other than the Authorized Dealer; are subjected to unusual physical stress or conditions (such as overloaded ramps or corrosion), natural disaster, governmental actions, wars, strikes, labor disputes, riots, theft, vandalism, terrorism or any reason beyond reasonable control; are damaged due to improper installation, misuse, abuse, accident or negligence in use, storage, transportation or handling, or tampering; or to products that are considered consumable items or items requiring repair or replacement due to normal wear and tear.

Product should be inspected prior to signing for delivery. Product damage incurred during shipping, unless noted on the Bill of Lading at the time of delivery, renders this warranty void.

LIMITED LIABILITY: In no event shall THE AUTHORIZED DEALER be liable to the purchaser or any third party for any indirect, incidental, consequential, special, exemplary or punitive damages arising out of the use of the product, including, without limitation, property damage, loss of value of the product or any third party products that are used in or with the product, or loss of use of the product or any third party products that are used in or with the product.

