




Universal Steel Truck Bed Rear Bar Instructions for Part # REAR-BAR

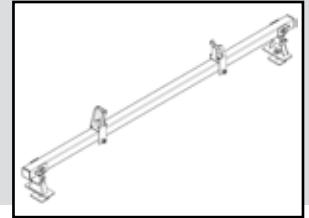

General Guidelines ⚠

- It is the user's responsibility to read and follow all instructions.
- Keep these instructions with the product at all times and review before each use.
- It is the responsibility of this product's owner to furnish the instructions to any person that borrows or purchases the product.
- Inspect the product before use to ensure it is assembled properly and all parts are in safe working order and free of defects.
- Never modify this product in any way.
- All circumstances cannot be addressed in these instructions. Please use common sense and practice general safety measures when using this product.
- Parts and/or instructions are subject to change without notice.

Product Warranty and Liability

GENERAL PRODUCT WARRANTY: Products purchased from the Authorized Dealer (original place of purchase) or Merchant ("Dealer") will be free of defects in material and workmanship at the time of receipt, and will meet the specifications stated at the place of purchase transaction or online at the Dealer's website, under normal use and service when correctly installed, operated and maintained. This product warranty is effective for the period of time stated below, unless otherwise stated in the product instructions or depicted in the product advertisement. **All Authorized Dealer warranties are NON-TRANSFERABLE** and cover only the original end purchaser. This limited warranty does not cover products purchased through non-authorized dealers. Non-authorized dealer receipts are not accepted for warranty verification.

*****Warranty claims must be made directly to the original place of purchase.*****

WARRANTY PERIOD: This warranty remains in force for one year from the date of the product's accepted delivery. The Authorized Dealer offers a one year manufacturer's warranty for most products unless otherwise specified on the product advertisement.

WARRANTY SERVICE: The Authorized Dealer will replace any defective or malfunctioning part at no charge, including payment of the shipping costs of parts or replacement product to and from the manufacturer. The purchaser is responsible for labor charges. If the product does not meet specifications as depicted in the advertisement, the Authorized Dealer will refund the full purchase price of the product.

Questions regarding the warranty on a specific product and warranty claims should be directed to the Authorized Dealer with whom the purchase transaction was made.


WARRANTY LIMITATIONS: The above warranty does not apply to products that are repaired, modified or altered by any party other than the Authorized Dealer; are subjected to unusual physical stress or conditions (such as overloaded ramps or corrosion), natural disaster, governmental actions, wars, strikes, labor disputes, riots, theft, vandalism, terrorism or any reason beyond reasonable control; are damaged due to improper installation, misuse, abuse, accident or negligence in use, storage, transportation or handling, or tampering; or to products that are considered consumable items or items requiring repair or replacement due to normal wear and tear.

Product should be inspected prior to signing for delivery. Product damage incurred during shipping, unless noted on the Bill of Lading at the time of delivery, renders this warranty void.

LIMITED LIABILITY: In no event shall THE AUTHORIZED DEALER be liable to the purchaser or any third party for any indirect, incidental, consequential, special, exemplary or punitive damages arising out of the use of the product, including, without limitation, property damage, loss of value of the product or any third party products that are used in or with the product, or loss of use of the product or any third party products that are used in or with the product.



Parts Diagram

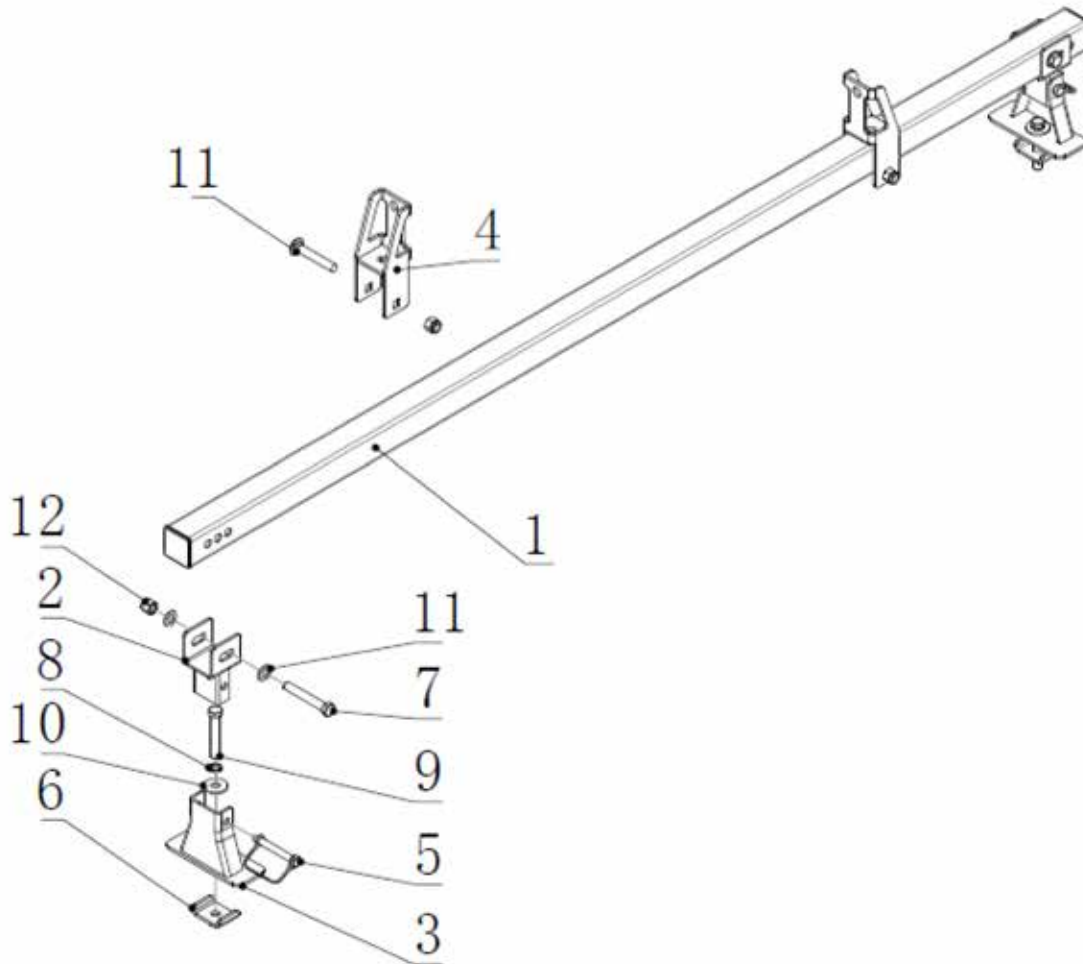

Part #	Description	Qty
1	Beam	1
2	Support Components	2
3	Support Seat	2
4	L-Shape Bracket	2
5	Quick Pin	2
6	U-Shape Mounting Plate	2
7	M12x80 Hexagon Bolt	4


Part #	Description	Qty
8	12 Spring Washer	2
9	M12x75 Hexagon Bolt	4
10	12 Large Flat Washer	4
11	12 Flat Washer	8
12	M12 Lock Nut	2
13	M12x75 Carriage Bolt	2

Tools Required: 19mm wrench

Assembly and Installation


Step 1. Place the support seat (3) on the tail pocket of the pickup to install the bolt inside as shown in Fig. 1. Install the M12x75 outer hexagonal bolt full thread (9) with 12 spring washer (8) and 12 large flat washer (10) into the support seat (3) and secure with the U-shape mounting plate (6). Repeat with the other side. Do not fully tighten bolts yet. See Fig. 1.

Fig.1

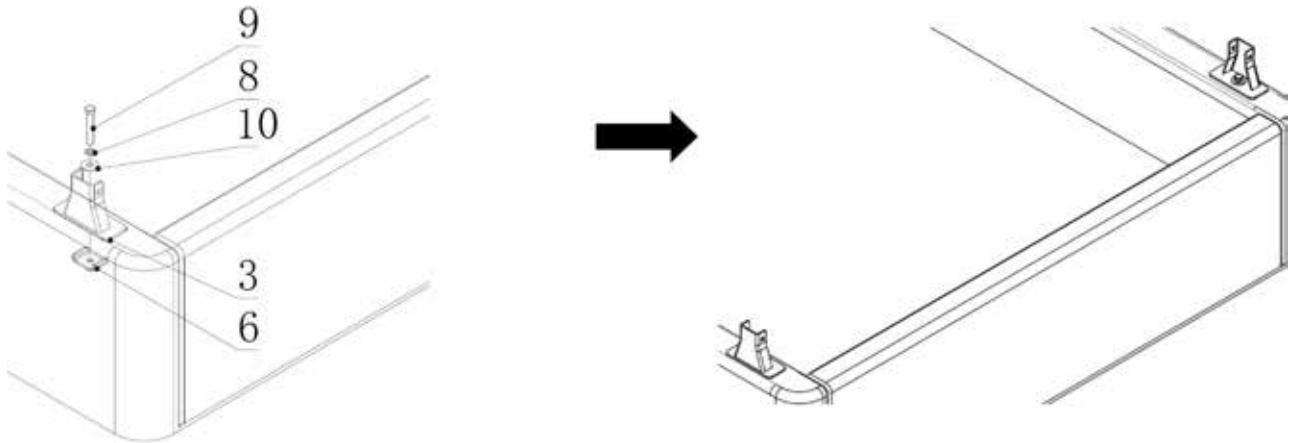


Step 2. Place the support assembly (2) in the support seat (3). Install the quick pin (5) through the support seat (3) and the support assembly (2), then secure with the spring wire buckle. See Fig. 2.

Fig.2

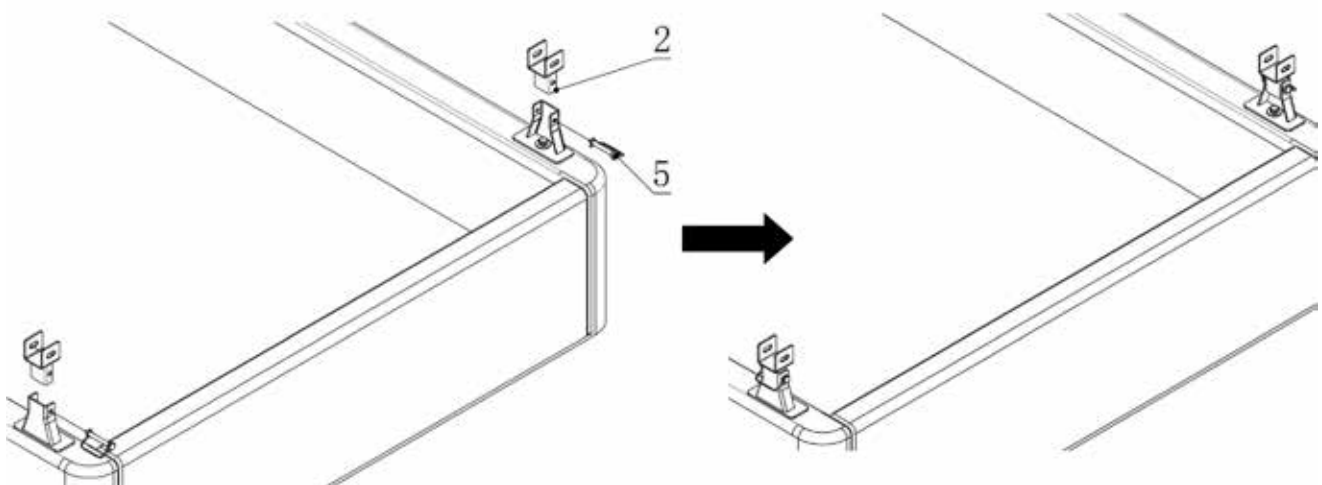

Step 3. Fit the beam (1) into the two support components (2). Install the M12x75 outer hexagonal bolt (8) through a 12 flat washer (11), the support assembly (2), beam (1), and a second 12 flat washer (11). Secure with an M12 lock nut (12). Repeat with the other side. Tighten and secure all bolts. See Fig. 3.

Fig.3

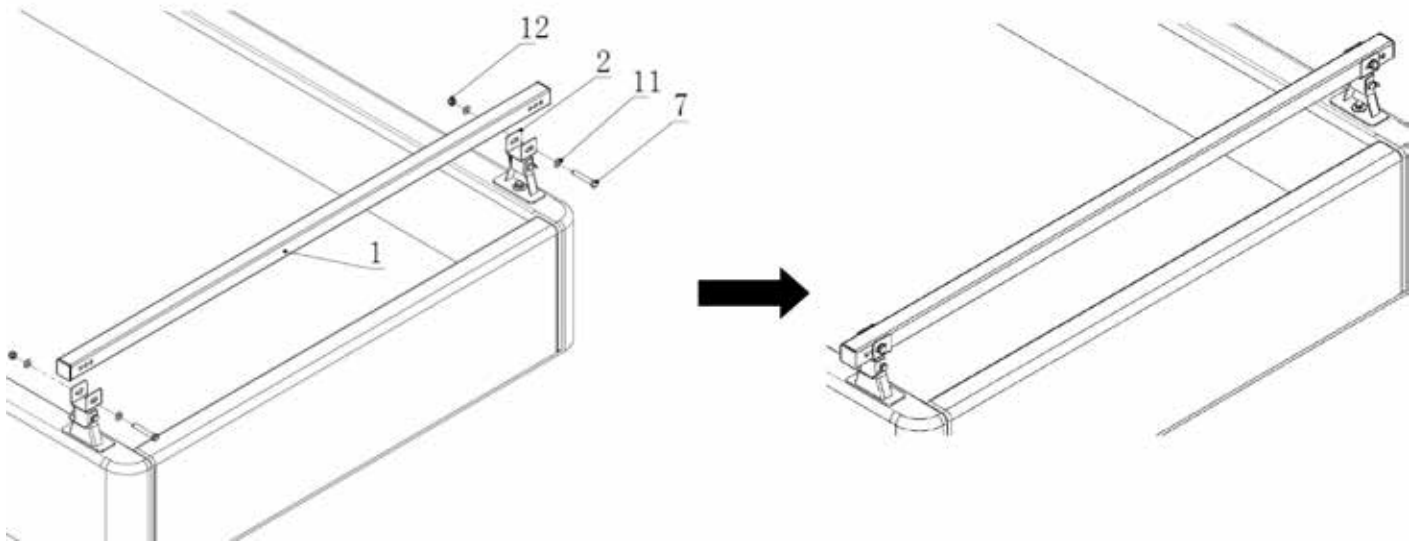

Step 4. Place the L-shape bracket (4) on the beam (1) in the direction shown in Fig. 4. Install an M12x75 carriage bolt (13) through the L-shape bracket (4) underneath the beam (1). Secure with an M12 lock nut (12). Repeat with the other bracket. Adjust to the desired position and tighten securely. See Fig. 4.

Fig.4

