




## General Guidelines

- It is the user's responsibility to read and follow all instructions.
- Keep these instructions with the product at all times and review before each use.
- It is the responsibility of this product's owner to furnish the instructions to any person that borrows or purchases the product.
- Inspect the product before use to ensure it is assembled properly and all parts are in safe working order and free of defects.
- Never modify this product in any way.
- All circumstances cannot be addressed in these instructions. Please use common sense and practice general safety measures when using this product.
- Parts and/or instructions are subject to change without notice.

## Parts

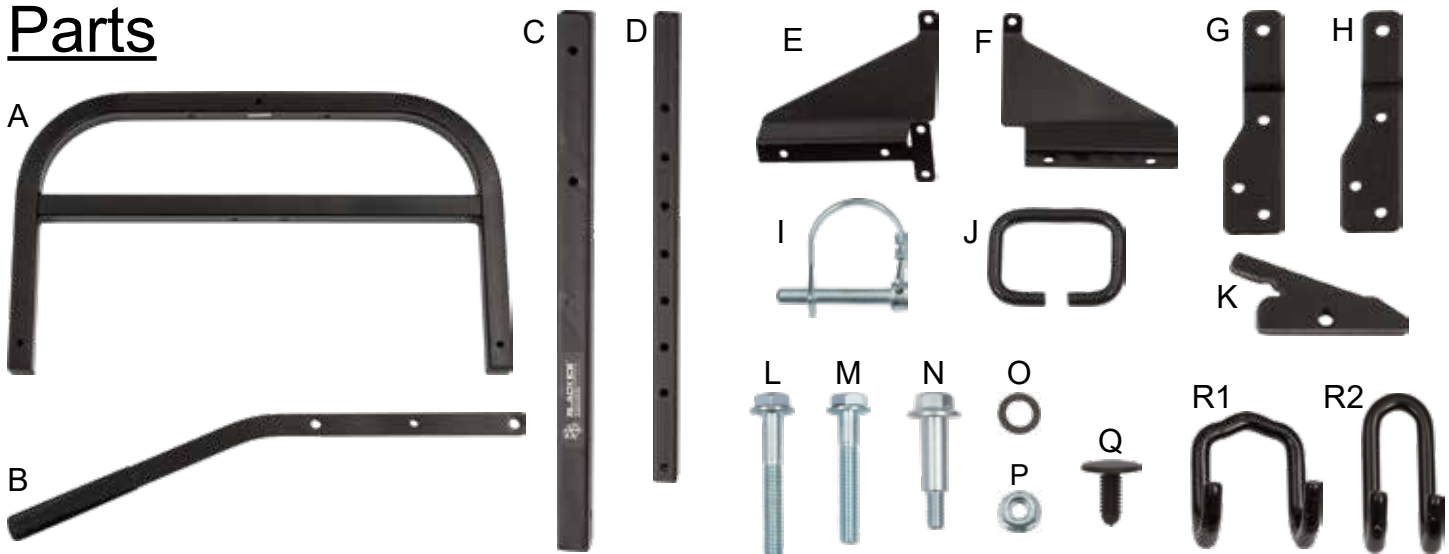

Part	Description	Quantity
A	Base	1
B	Handle	1
C	Outer Support Tube	1
D	Inner Support Tube	1
E	Support Plate 1	1
F	Support Plate 2	1
G	Support Bracket 1	1
H	Support Bracket 2	1
I	Pin Clip	1
J	Handle Clip	1

Part	Description	Quantity
K	Blocker	2
L	M6x45 Flange bolt	5
M	M6x40 Flange Bolt	4
N	M6x35 Flange Shoulder Bolt	1
O	UHMW Washer	2
P	M6 Flange Nut	10
Q	Plastic Fastener	3
R1	Hook 1	1
R2	Hook 2	1

Tools Required: 10mm wrenches

# Assembly

**Step 1.** Connect the support plates (E, F) to the base (A) using the M6x40 bolts (M) and nuts (P).



**Step 2.** Assemble the support tube. Connect the outer support tube (C) to the base assembly using two M6x45 bolts (L) and nuts (P). Place the inner support tube (D) in the outer support tube and secure at the desired height with the pin clip (I).



**Step 3.** Assemble the handle mechanism. Connect the support brackets (G, H) to the inner support tube (D) using two M6x45 bolts (L) and nuts (P). Hand-tighten until the assembly is complete. Connect the blockers (K) to the support brackets using one M6x45 bolt (L) and nut (P). Connect the handle (B) to the support brackets using the shoulder bolt (N), washers (O), and nut (P). When assembly is complete, tighten hardware with wrenches.



**Step 4.** Hook the handle clip (J) onto the handle (B), placing it so that it can hook onto the blockers (K), locking the handle in place when in use.



**Step 5.** Place the hook (R1 or R2) that best suits your snowmobile onto the end of the handle.



**Step 6.** Fit the plastic fasteners (Q) into the holes on the bottom of the base (A).



---

## Use

Place the snowmobile stand directly under the rear or front bumper. Push down the lift arm to lift the snowmobile off the ground. Hook the handle clip onto the blockers to keep it in place.



# Product Warranty and Liability

**GENERAL PRODUCT WARRANTY:** Products purchased from the Authorized Dealer (original place of purchase) or Merchant (“Dealer”) will be free of defects in material and workmanship at the time of receipt, and will meet the specifications stated at the place of purchase transaction or online at the Dealer’s website, under normal use and service when correctly installed, operated and maintained. This product warranty is effective for the period of time stated below, unless otherwise stated in the product instructions or depicted in the product advertisement. **All Authorized Dealer warranties are NON-TRANSFERABLE** and cover only the original end purchaser. This limited warranty does not cover products purchased through non-authorized dealers. Non-authorized dealer receipts are not accepted for warranty verification.

**\*\*\*Warranty claims must be made directly to the original place of purchase.\*\*\***

**WARRANTY PERIOD:** This warranty remains in force for one year from the date of the product’s accepted delivery. The Authorized Dealer offers a one year manufacturer’s warranty for most products unless otherwise specified on the product advertisement.

**WARRANTY SERVICE:** The Authorized Dealer will replace any defective or malfunctioning part at no charge, including payment of the shipping costs of parts or replacement product to and from the manufacturer. The purchaser is responsible for labor charges. If the product does not meet specifications as depicted in the advertisement, the Authorized Dealer will refund the full purchase price of the product.

Questions regarding the warranty on a specific product and warranty claims should be directed to the Authorized Dealer with whom the purchase transaction was made.

**WARRANTY LIMITATIONS:** The above warranty does not apply to products that are repaired, modified or altered by any party other than the Authorized Dealer; are subjected to unusual physical stress or conditions (such as overloaded ramps or corrosion), natural disaster, governmental actions, wars, strikes, labor disputes, riots, theft, vandalism, terrorism or any reason beyond reasonable control; are damaged due to improper installation, misuse, abuse, accident or negligence in use, storage, transportation or handling, or tampering; or to products that are considered consumable items or items requiring repair or replacement due to normal wear and tear.

Product should be inspected prior to signing for delivery. Product damage incurred during shipping, unless noted on the Bill of Lading at the time of delivery, renders this warranty void.

**LIMITED LIABILITY:** In no event shall THE AUTHORIZED DEALER be liable to the purchaser or any third party for any indirect, incidental, consequential, special, exemplary or punitive damages arising out of the use of the product, including, without limitation, property damage, loss of value of the product or any third party products that are used in or with the product, or loss of use of the product or any third party products that are used in or with the product.

