

## Aluminum Ramp Owner's Manual – READ, UNDERSTAND AND SAVE THESE INSTRUCTIONS

### ⚠ WARNING ⚠

- Read, understand, follow and save all instructions before attaching and/or using product. NEVER allow anyone unfamiliar with these instructions to use this product.
- Read, understand, follow and save all instructions provided by the manufacturer of the product(s) that this ramp will be used with.
- Failure to follow these warnings and instructions may result in property damage, serious bodily injury, and/or death.
- Extreme caution should be used when loading or unloading your equipment.
- Do not exceed the rated capacity of the ramp. This ramp is rated for 600 lb distributed load capacity - 300 lb point load max.
- Do not exceed the capacity of your loading surface (i.e. tailgate, bumper). If unknown, consult the manufacturer to find load capacities.
- Do not drive or ride any equipment up or down the loading ramp.
- Straps must be secured tightly to limit any movement of the ramp while loading or unloading. If loading or unloading from a vehicle/trailer, be sure the vehicle is parked with emergency brake engaged and/or wheels are chocked and engine is off. If loading or unloading from a trailer, also make sure the trailer is properly coupled to the tow vehicle.
- Never stand in the path of equipment when loading/unloading with the ramp, and keep bystanders away from the ramps.
- This ramp must be used on a level and stable surface.
- Ramp surfaces may be slippery when wet or dirty.
- Ramps are intended for loading/unloading equipment onto a trailer or pickup truck. Do not use ramp sections as a ladder, bridge, scaffolding, or for any other use.
- Keep body parts completely clear of the hinge pin area at all times.
- Do not attempt to load or unload power equipment with its engine running.
- Do not leave ramps unattended when attached. Someone not knowing the intended use may misuse the ramps or move the ramps which may cause misalignment when returning to load/unload equipment.
- Do not cut, drill, weld or modify ramp sections. Any modifications to the ramp sections may cause them to become unstable. Never use ramp if there is any broken, bent or worn parts.
- Ramp may scratch loading surface (i.e. tailgate, bumper, trailer, ground surface).
- Remove ramp from loading position before moving vehicle or trailer.

### INSTRUCTIONS FOR USE

1. Assure your required capacity and loading height conform to the chart and diagram (see Fig. 1). Before each use check the strap for any fraying or excessive wear. Do not use if damaged in any way. Check the ramp thoroughly.
2. Make sure the vehicle is parked with emergency brake engaged and/or wheels are chocked and engine is off to prevent any movement while loading/unloading. If loading/unloading from a trailer, also make sure the trailer is properly coupled to the tow vehicle.
3. Center loading ramp on loading surface with top plates placed completely and firmly on top of the loading surface. Movement of ramps may scratch attachment or mounting surface of loading vehicle or trailer. Make sure the ramp is aligned with the wheels of the equipment being loaded. This is most important on ramps that allow the sections to be separated. Make sure that the sections are aligned at the proper distance apart so that the tires of the equipment being loaded are centered on each of the ramp sections. Attach the strap



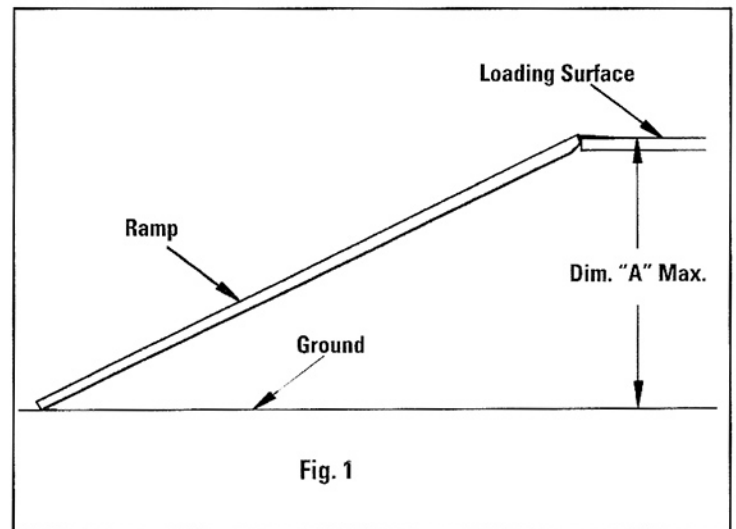


Fig. 1

- as shown in Fig. 2 & 3, from the underside of the ramp to a structural member of the loading vehicle (i.e. hitch, bumper, frame). When attaching the ramp straps to the loading vehicle, make sure that both ramps are in line with the ramp section it is holding down, see Fig. 2 & 3 ). (Note: The strap should be attached on the 4th or 5th hole from top in the center of the ramp surface). Straps must be secured tightly to the loading vehicle/trailer
6. With the engine off, carefully roll or winch equipment up or down ramp. **Do not drive or ride any equipment up or down loading ramp.**

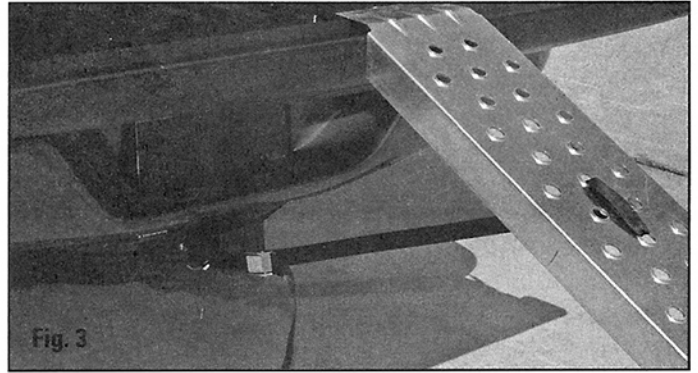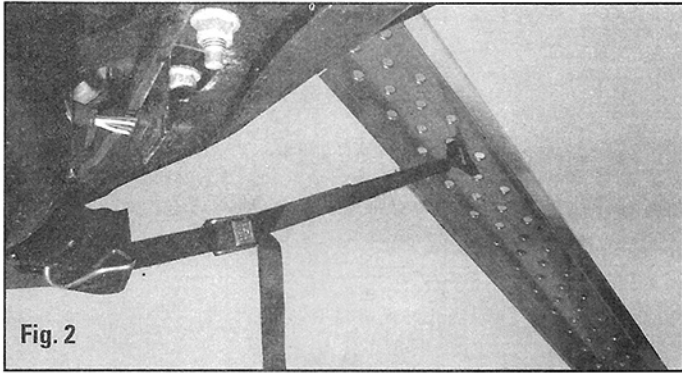

Ramp Model	Capacities (per set of ramps)		Point Load	Loading Height Dim. "A"	Dimensions	Ramp Weight
	Ramp Style	Distributed Load				
11230	Straight Steel Ramp	600 lb	300 lb	32" max.	8" x 69"	15.5 lb

## MAINTENANCE

- Periodically check the strap and the sewn connections on the strap for any fraying or excessive wear.
- Make sure the strap cam lock is operating properly (dirt, oil, etc. build-up may cause cam lock to work less effectively).
- Keep the ramp loading surface clean (free of dirt, oil, etc. ) to continue to provide maximum traction.

## LIMITED WARRANTY

Cequent Consumer Products, Inc. products are warranted to the original consumer purchaser to be free from defects in material or workmanship under normal use and service, ordinary wear and tear excepted, for a period of one (1) year from the date of purchase as shown on customer's receipt. This warranty shall not apply to any defects caused by: (I) physical abuse of goods or any component or acts of vandalism by any person other than Cequent Consumer Products, Inc., it's employees, agents or subcontractors; (II) alterations, modifications, additions or repairs made during the applicable warranty period by anyone other than Cequent Consumer Products, Inc., it's employees, agents or subcontractors; (III) improper installation or use contrary to Cequent Consumer Products Inc.'s instruction; or (IV) accidents or damage resulting from fire, water, wind, hail, lightning, electrical surge or failure, earthquake, theft or similar causes not caused or contributed to by the negligence of Cequent Consumer Products, Inc. or it's employees, agents or subcontractors.

**Cequent Consumer Products, Inc.**  
 27070 Miles Road • Solon, Ohio 44139  
[www.cequentgroup.com](http://www.cequentgroup.com)  
**Cequent Help Hotline: 1-800-234-6992**

Made in China • Hecho en China