

Hard-Mounting Instructions



TOOLS NEEDED:
Drill w/ 1/4" drill bit
7/16 wrench

Step 1.

PLACE the Tamarack™ box on the center of your ATV rack.

MARK the underside of your Tamarack™ box along both sides of any tubular cross-member or opening of your composite rack towards 4 corners, using the u-bolt tips as a guide.

NOTE: Removing the rack first as shown at right may aide in the marking of your box. (recommended)

Step 2.

DRILL marked areas using a 1/4" drill bit.

Step 3.


RE-INSTALL ATV rack (if removed).

PLACE the Tamarack™ box on the center of your ATV rack. Then, insert U-bolts through the underside of the box and install u-bolt plate and nuts loosely until all 4 are installed.

Step 4.

TIGHTEN all wing nuts until box is secure.

LOAD & GO!

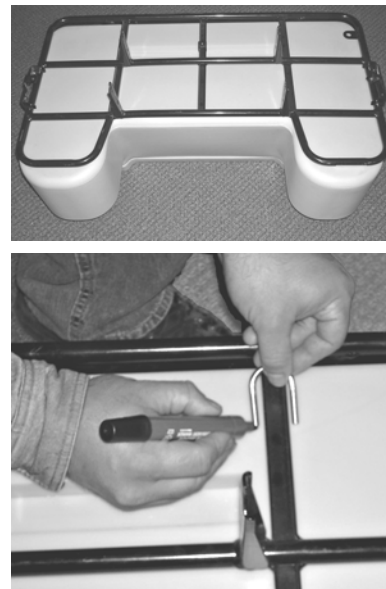

Questions?

Call Customer Service Toll-Free
(800) 269-6701