

RAGE

POWERSPORT PRODUCTS

Assembly Instructions



for Tray Style Cargo Carriers:

- CC-4820-DLX
- CC-6020-DLX
- CC-F4820-DLX
- CC-F6020-DLX

Parts List:



M10 Nut
x3



M10 Lock Washer
x3



M10 Washer
x6



M10x80 Bolt
x3



Reflective Sticker
x2 NON-FOLDING models
x3 FOLDING models



M10 Nut
x4



M10 Lock Washer
x4



M10 Washer
x4



M10x20 Carriage Bolt
x4



Receiver Tube
For NON-FOLDING models ONLY
x1



Cargo Carrier Tray Section
x2

**For FOLDING cargo carrier models CC-F4820 or CC-F6020 ONLY.
NOT included with non-folding versions.**



Folding Receiver Tube
x1



Main Tube w/ Bracket
(folding models only)
x1



Pin
x1



Pivot Bolt
x1



Pivot Bolt Nut
x1



Pivot Bolt
Lock Washer
x1



Pivot Bolt
Washer
x2


*Trailer Hitch Pin not included.

Basket Assembly


Slide Cargo Carrier Sections together until the square holes line up. It may help to prop up one or both ends to keep the holes aligned.



Secure the sections with the 4 Carriage Bolts, Washers, Lock Washers, and Nuts.

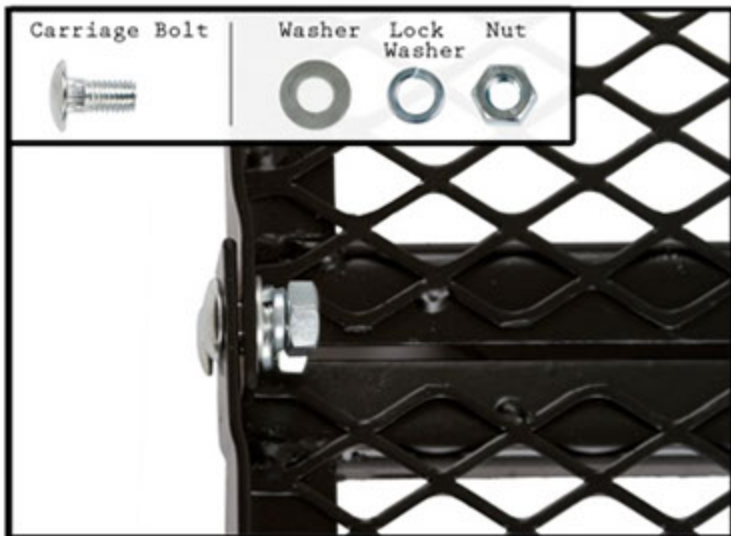


Flip the carrier over to install the Receiver Tube or Main Tube w/Bracket. Secure with 3 M10x80 Bolts, Washers, Lock Washers, and Nuts.

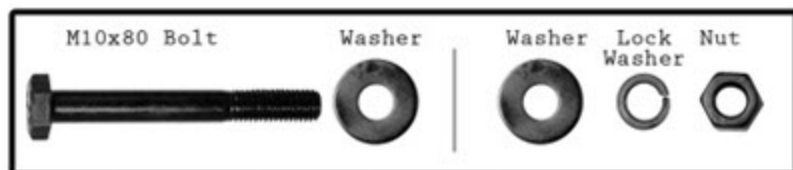

Face Receiver Tube with holes extending off the carrier.



Make sure the folding model Main Tube bracket faces toward the top of the carrier.

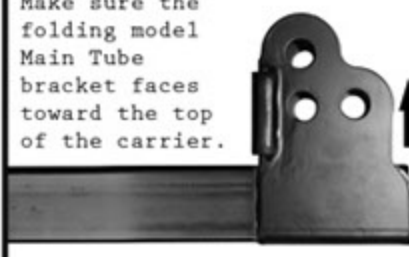

* For Folding Models:

CC-F4820

CC-F6020



Insert the rounded end of the Folding Receiver Tube into the Main Tube bracket.




Secure Folding Receiver Tube with Pivot Bolt* and Pin to main tube bracket

* Pivot bolt assembly (side view)



To fold the carrier vertical, remove Pin and fold carrier. Align holes and reinstall Pin in top Main Tube bracket hole.


Cargo Carrier Side

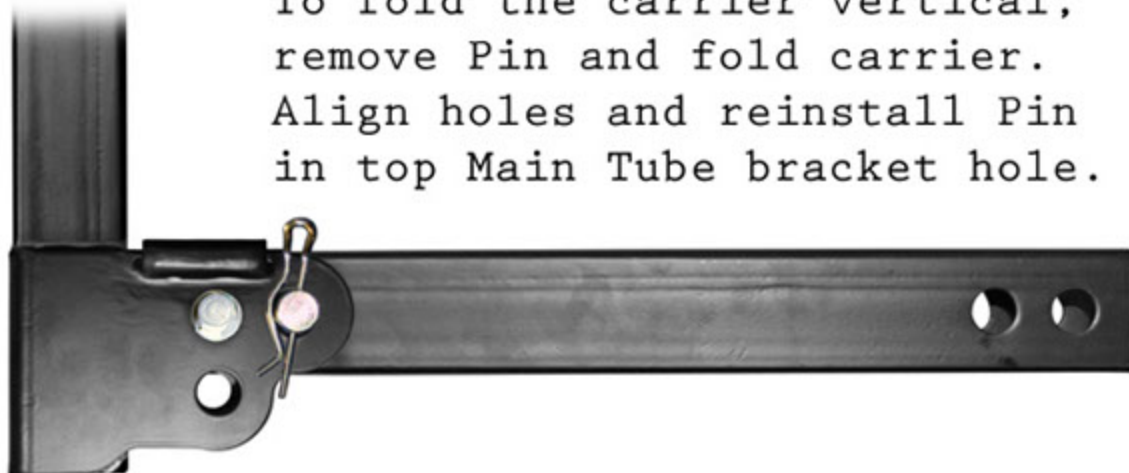


Rail Install


Models: CC-4820 & CC-6020
Sold Separately

Parts List

 (4) Crossbar bolts



 (8) Carrier bolts
Each includes (2) washers
and (1) nut.

 (2) Crossbars

Assembly

1. Attach the (2) rails with (2) crossbars using the (4) crossbar bolts to create the rail framework.



2. Align the rail assembly over the CC-4820 or CC-6020 and drill (8) holes into the carrier for rail attachment. Each end of the rail should attach to a corner of the cargo carrier.



3. Bolt each end of the rail to the corner of the cargo carrier with the nut secured from the inside.

For Your Safety:



CAUTION

- Distribute load evenly
- Do not exceed the lesser of (1) hitch manufacturer's tongue weight rating; (2) vehicle manufacturer's rear load limit; (3) 500 pounds total cargo.
- Do not transport people or animals on the carrier
- Do not allow cargo to block taillights/vehicle safety equipment
- Securely strap all cargo to the carrier and check frequently during travel
- Do not carry loads that are wider than the carrier platform
- Carrier hitch pins and cotter pins must be secured before each use
- Be certain to secure all items to the carrier
- Do not transport flammable/combustible items on the carrier
- Trailer Hitch Pin sold separately.
- Be sure to attach reflective stickers

