


# LOADING DOCK BOARD INSTRUCTIONS

## Attaching the Chain:

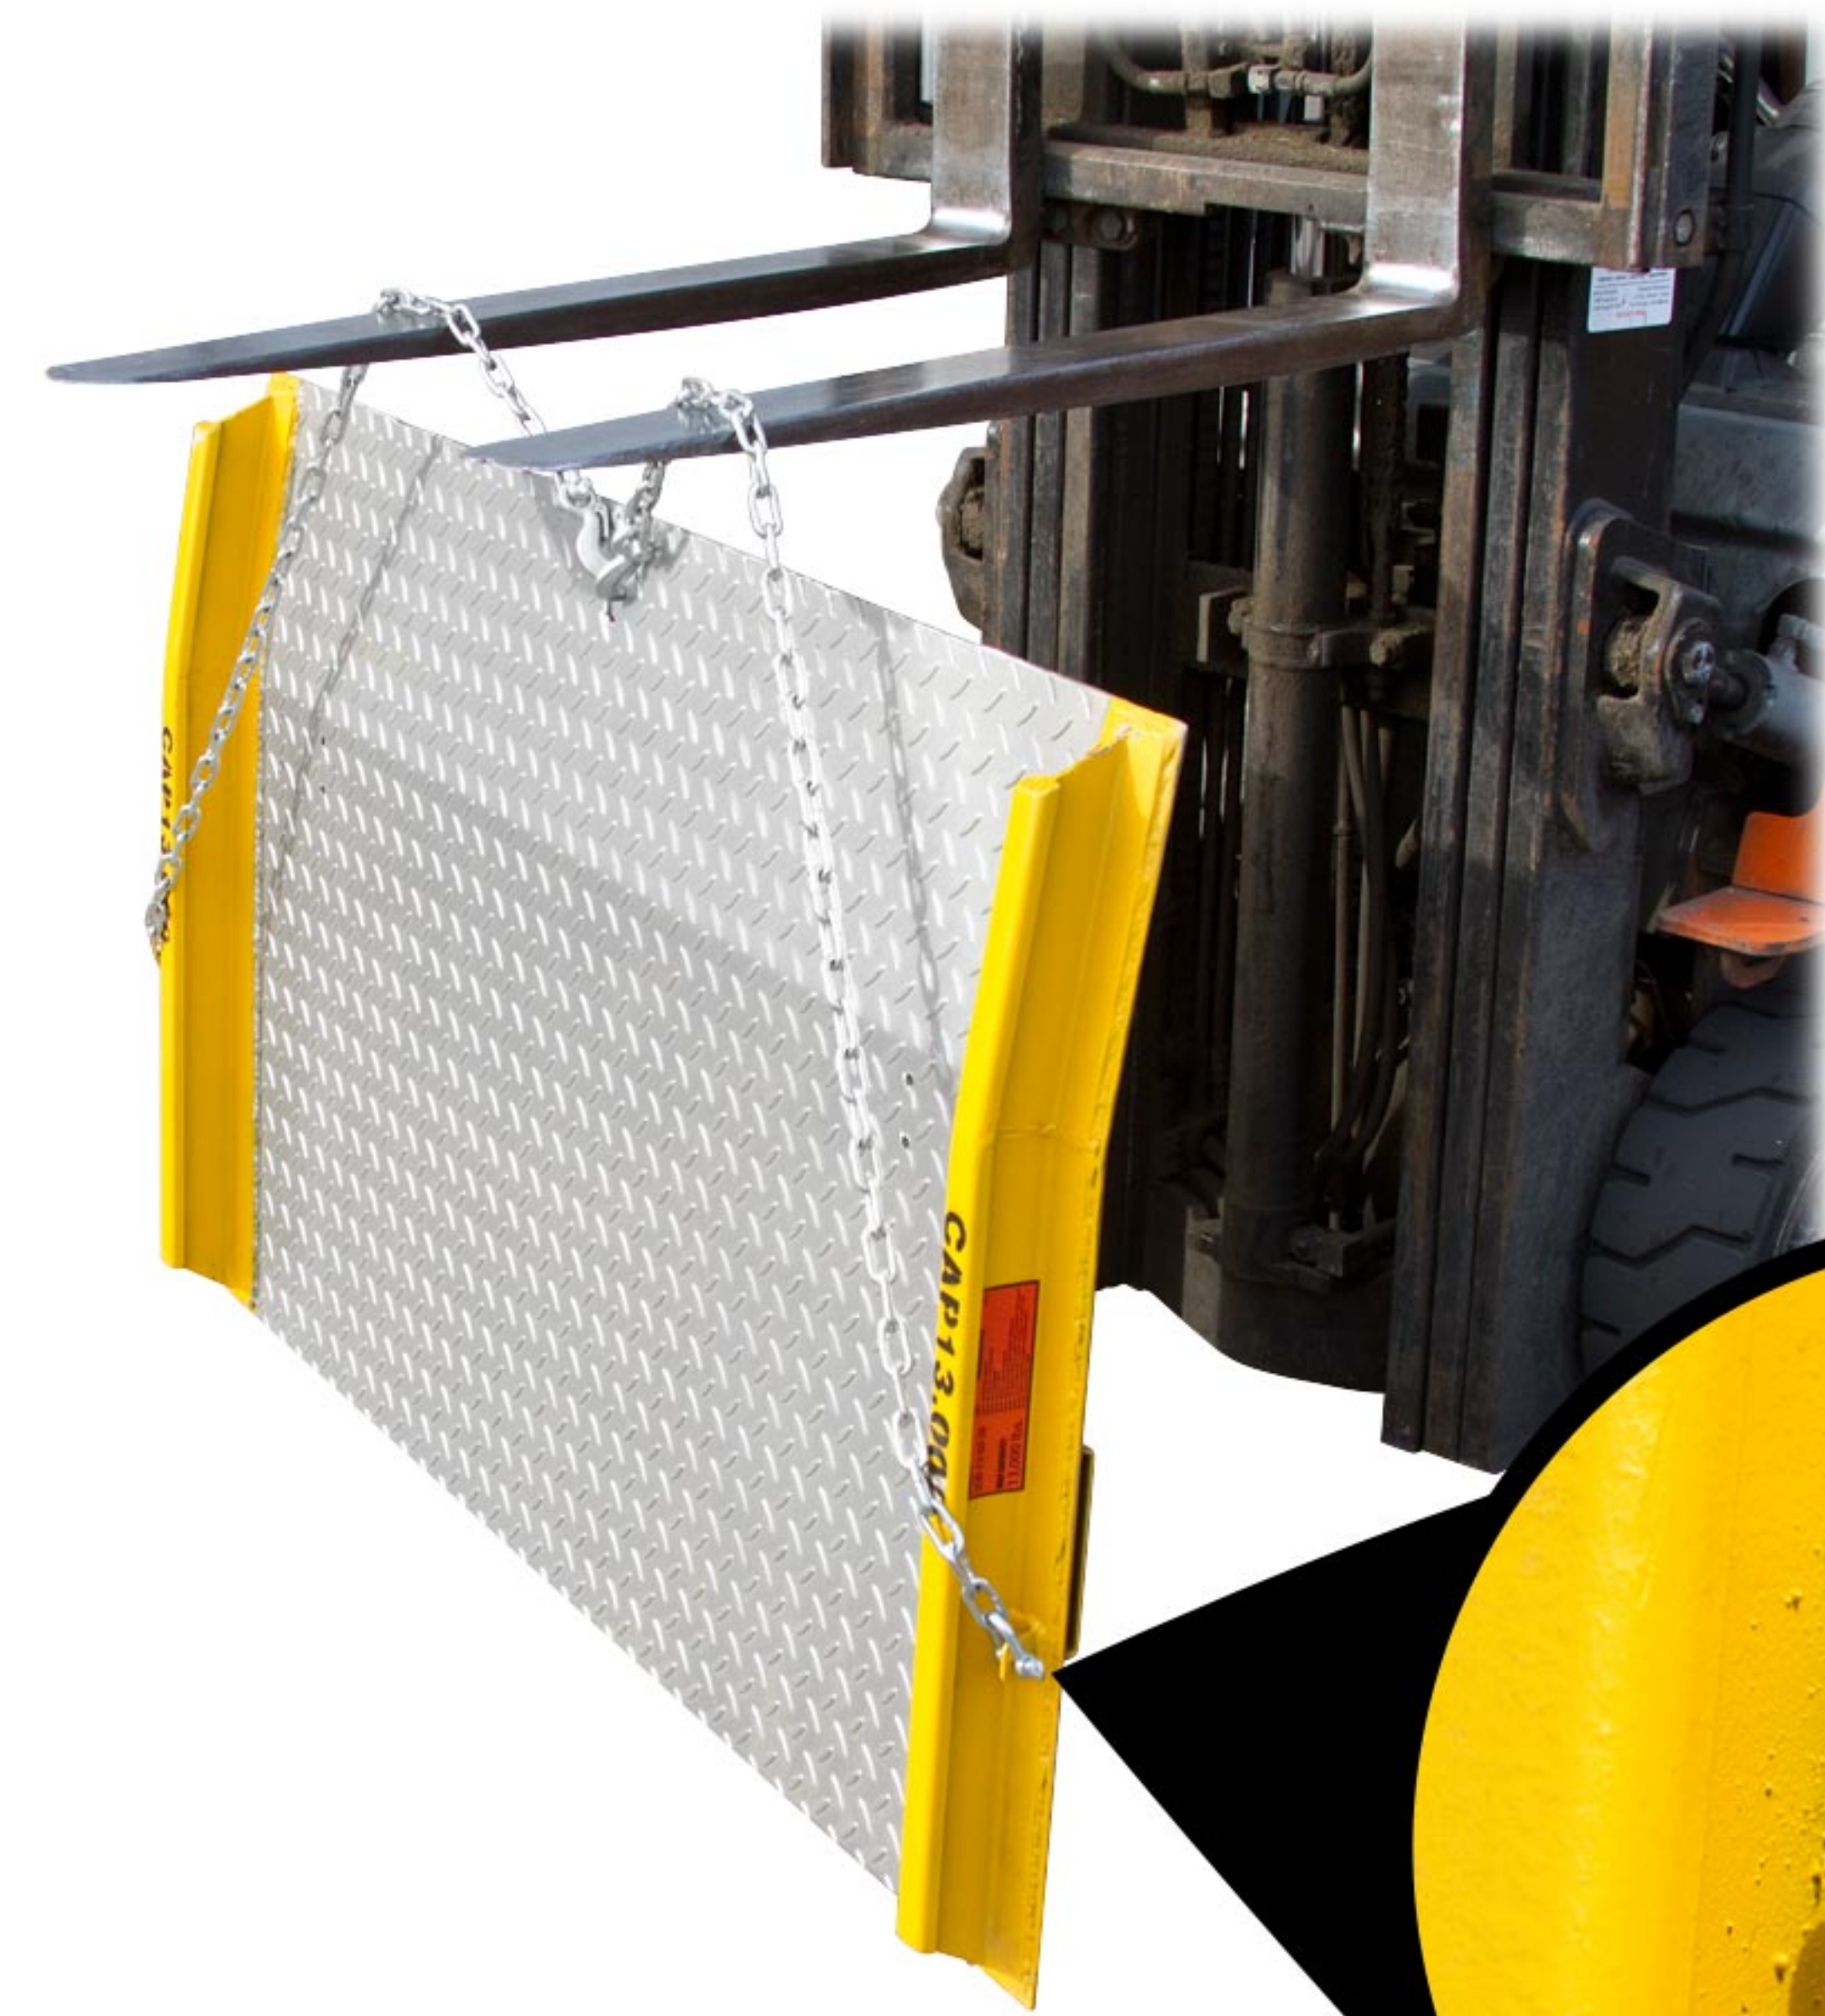

**1. Unscrew pin from U-Bolt.**



**2. Place U-Bolt around bracket on side of Dock Board so holes are aligned. Insert pin through all 3 holes and turn to tighten.**

**3. Repeat on other side with other chain.**



**4. Hook ends of chain through circle cut-out on dock board**

# LOADING DOCK BOARD INSTRUCTIONS

## Mounting the Underside Stabilizer Braces:



**1. Place screws through holes of dock plate.**



**2. Align screws in dock plate with holes of underside stabilizer brace. Push through until base of brace is against dock plate.**



**3. Tighten washer then hex nut to each screw to hold in place.**

**4. Repeat with other underside stabilizer brace.**