

# Black Widow

Motorcycle Wheel Chock

## BW-MC-CH3



### PARTS LIST

 1 x Cross Bar

 1 x Rear Cradle

  
1 x Chock Base

#### Hardware

2 x Small Bolt

2 x Small Flat Washer


2 x Small Nut

2 x Large Bolt

2 x Large Nut

### ASSEMBLY INSTRUCTIONS

1) Align **Cross Bar** with the **Chock Base** and secure with two small bolts, washers, and nuts.

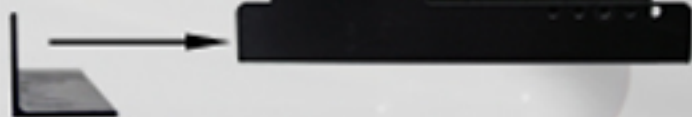

2) Lower the rear **Cradle** into the desired hole location on the **Chock Base**, secure with two large bolts, washers and nuts.



3) Adjust rear **Cradle** angle tilting down for optimal wheel entrance.

### SAFE LOADING PROCEDURE

When loading, ensure the rear Cradle is in the right position for the size of tire being loaded into the wheel chock. Proper caution should be taken when dismounting the bike and securing with cam buckle or ratchet straps. There is no guaranteed safety when using this chock. Use the BW-MC-CH at your own risk



Rage Powersport Products 575 W. High Street Aurora, MO 65605  
Toll Free 1-800-851-6396 <http://www.ramps.biz>