


Thank you for purchasing The Next Generation Big Boy II Ramp System. We are confident that your ramp will serve you many years of safe and effective loading. Use these instructions to best experience your ramp.

! ATTENTION !

READ AND FOLLOW THESE INSTRUCTIONS BEFORE USING THIS PRODUCT. IMPROPER USE COULD RESULT IN INJURY, AND PRODUCT OR PROPERTY DAMAGE.

Assembly

Before assembling, check the included hardware for correct parts and quantities. If you are missing any parts contact the manufacturer.

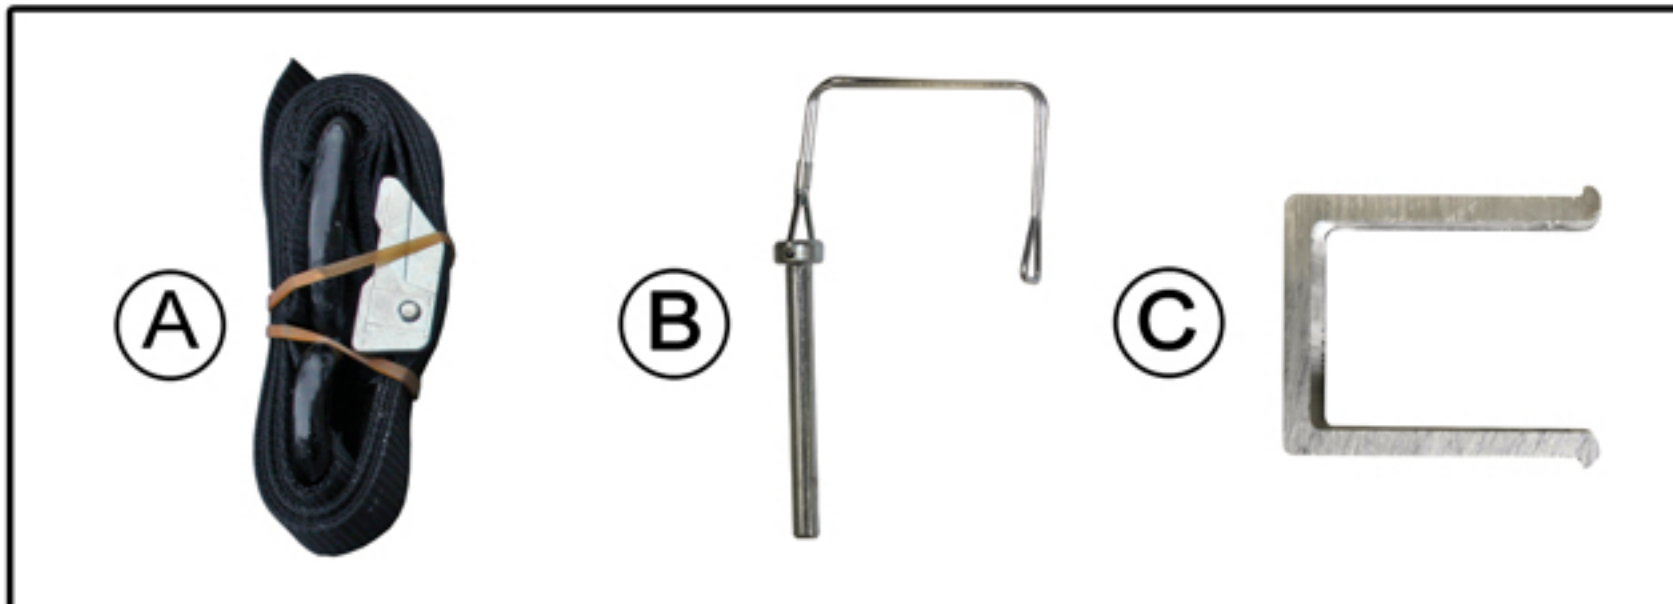

- (A) Cam Buckle Safety Straps (2)
- (B) Spring Clip Pins (2)
- (C) C-Beam Brackets (2)

1. Unfold and place one ramp on tailgate (Figure 1)
2. Install 2 C-Beam Brackets along the single ramp, as in Figure 2.
3. Unfold and position the second ramp.
4. Slide the second ramp into the C-Beam Brackets
5. Lock in place with 1 Spring Clip Pin. Correct C-Beam Bracket configuration shown in Figure 3.
6. Install a Cam Buckle Safety Strap for each ramp. Please see next page for more information on proper safety strap installation and care.



Figure 1

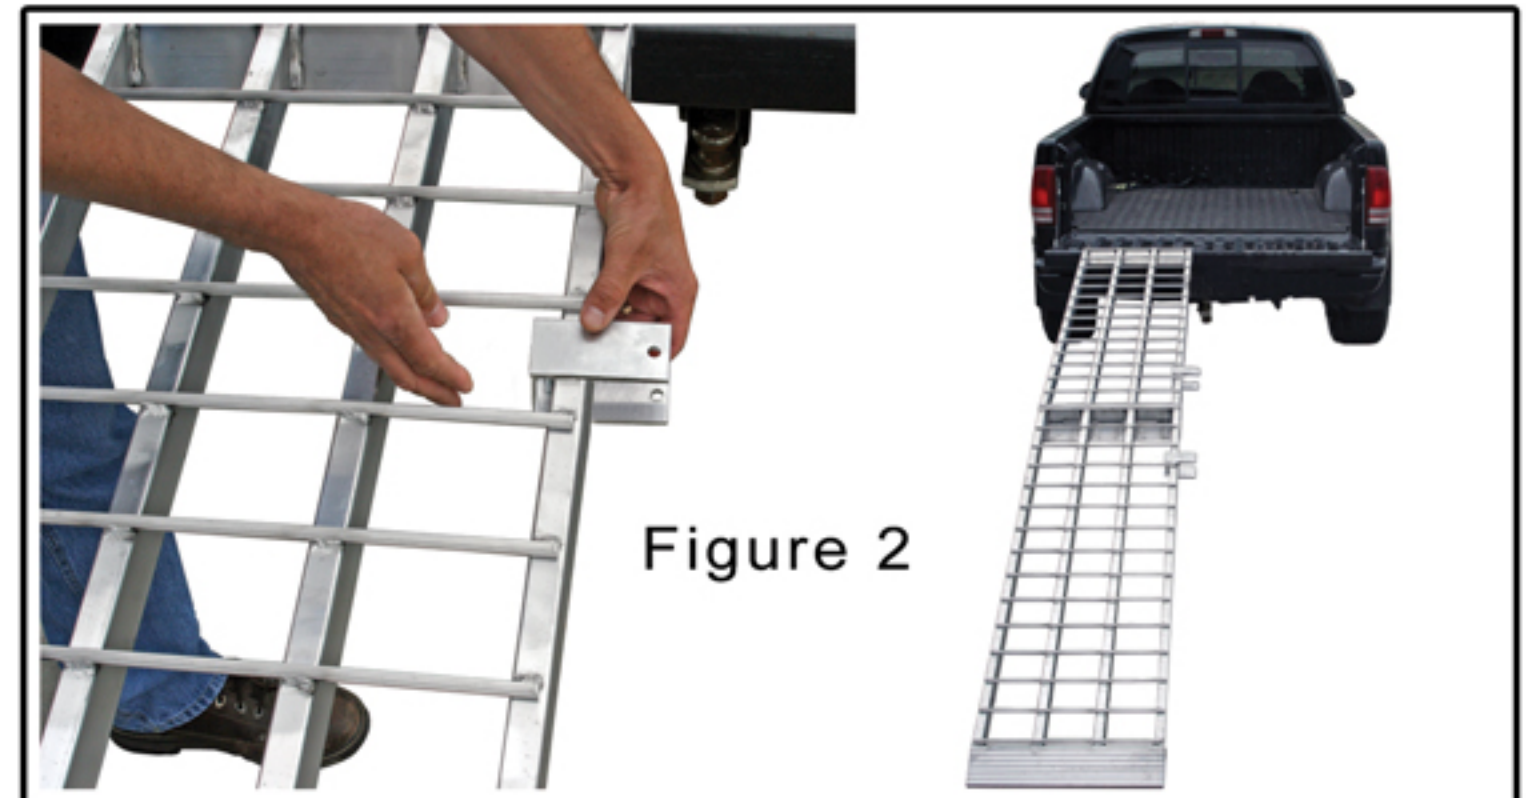


Figure 2

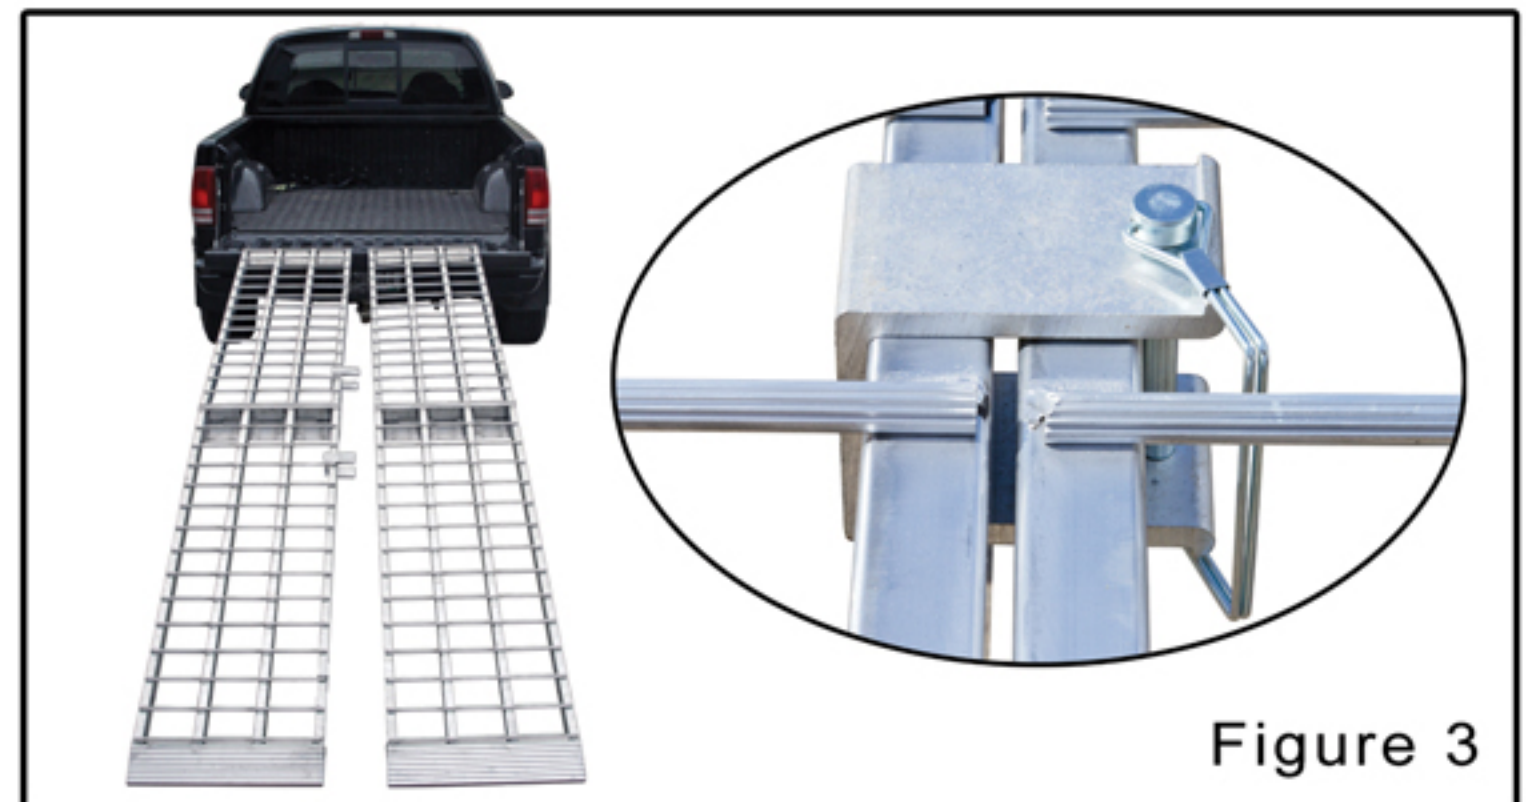


Figure 3



Instructions for Proper Use

! WARNING !

NEVER EXCEED MAXIMUM RATED WEIGHT CAPACITIES OF RAMPS. USE AT YOUR OWN RISK.

Preparation for Loading

1. Park truck or trailer on firm, flat ground.
2. Remove any obstructions from truck/trailer bed.
3. Check tailgate cables/brackets for damage or wear. If tailgate is not sturdy or cables are damaged, do not continue.
4. Unfold ramps and place the ramp snugly on the tailgate with the end plate lip overlapping the tailgate (Figure 4).

Securing Ramps

1. Before each use, check straps for fraying and wear, do not use damaged straps.
2. Loop the strap around the main support beam of the ramp approximately 2ft from the top of the ramp (Figure 5).
3. Find a secure place to hook the safety strap. Trailer hitch chain loops or bumper supports are recommended. Hook both ends of the strap to the vehicle/trailer (Figure 6).
4. Tighten the strap until tight and ramp is secure against the tailgate or trailer.
5. Repeat steps 1-4 with the second strap.

Loading

1. Start motorcycle; allow it to run to ensure it doesn't stall on the ramp.
2. Position motorcycle to ride up the center of the ramp.
3. Slowly ride up the ramp, keep hand near the brake, be ready to put feet down incase of stall. Acceleration must be slow, smooth and constant.

! WARNING !

NEVER OVER ACCELERATE! OPERATOR MUST BE IN CONTROL OF VEHICLE AT ALL TIMES. LOSS OF CONTROL COULD RESULT IN INJURY.

4. Stop when motorcycle is in truck bed/trailer.
5. Secure motorcycle to truck/trailer. Remove ramp and straps.

Unloading

1. Follow steps from Preparation for Loading and Securing Ramps.
2. Clear the unloading area behind the ramp.
3. Sit on the motorcycle with hand on brake, put up kickstand.
4. With motorcycle OFF and in NEUTRAL, slowly back down the ramp in a walking motion, letting the brake slip.
5. Park the bike. Remove ramp and straps.

Care

Straps - Before each use:

1. Check straps for fraying and wear, do not use damaged straps.
2. Keep out of direct sunlight.
3. If wet, dry thoroughly before storing.

Ramps - Before each use:

1. Check all ramps, C-Beam brackets and Spring Pin Clips for tightness.
2. Inspect ramps for damage; do not use damaged or bent ramps.

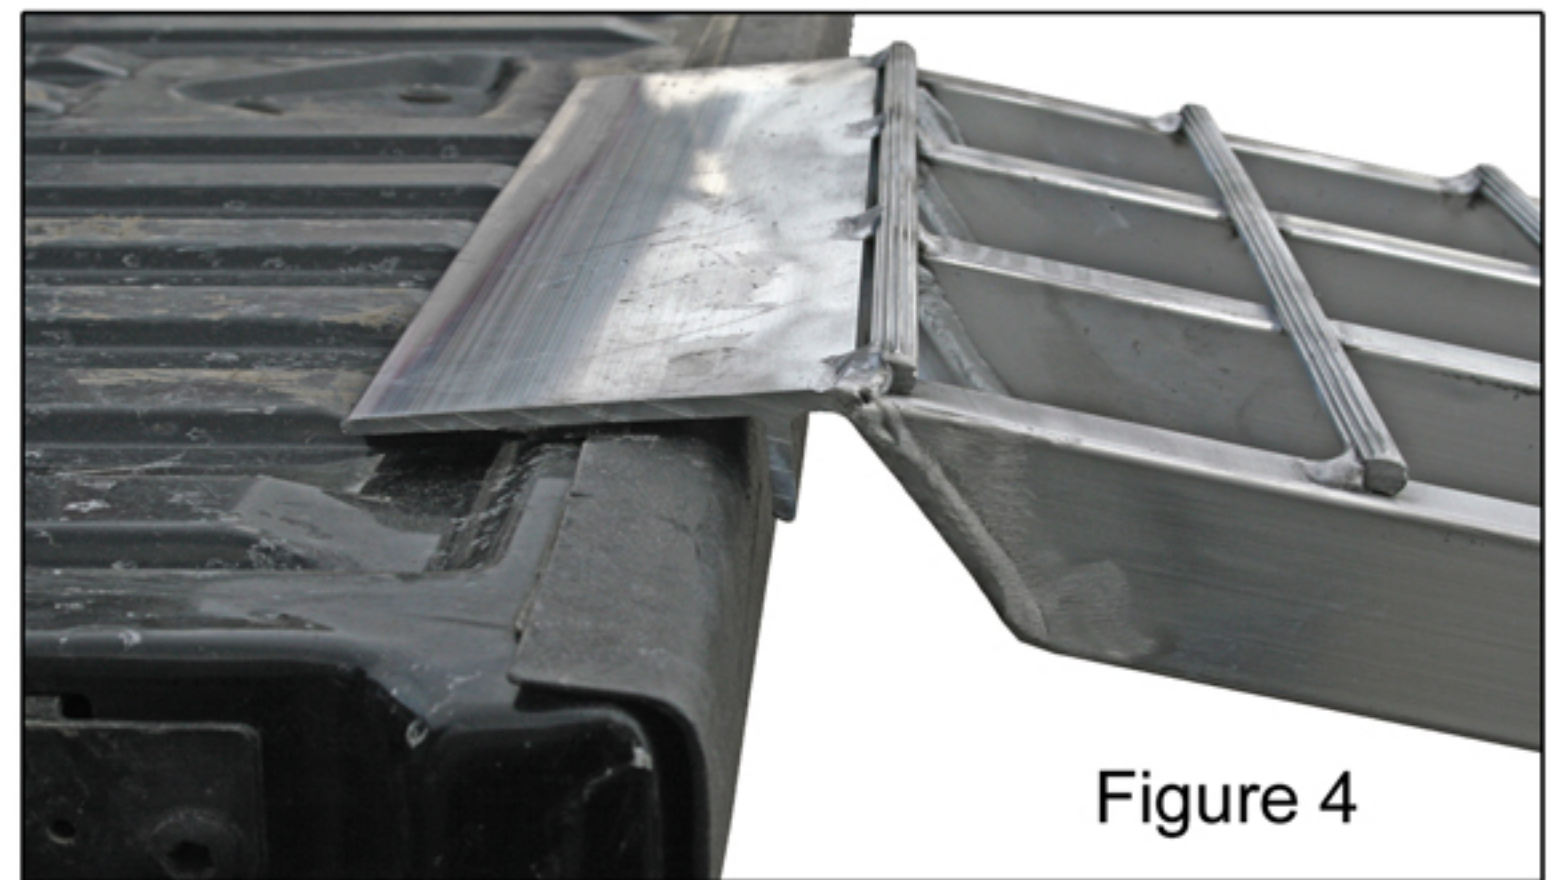


Figure 4

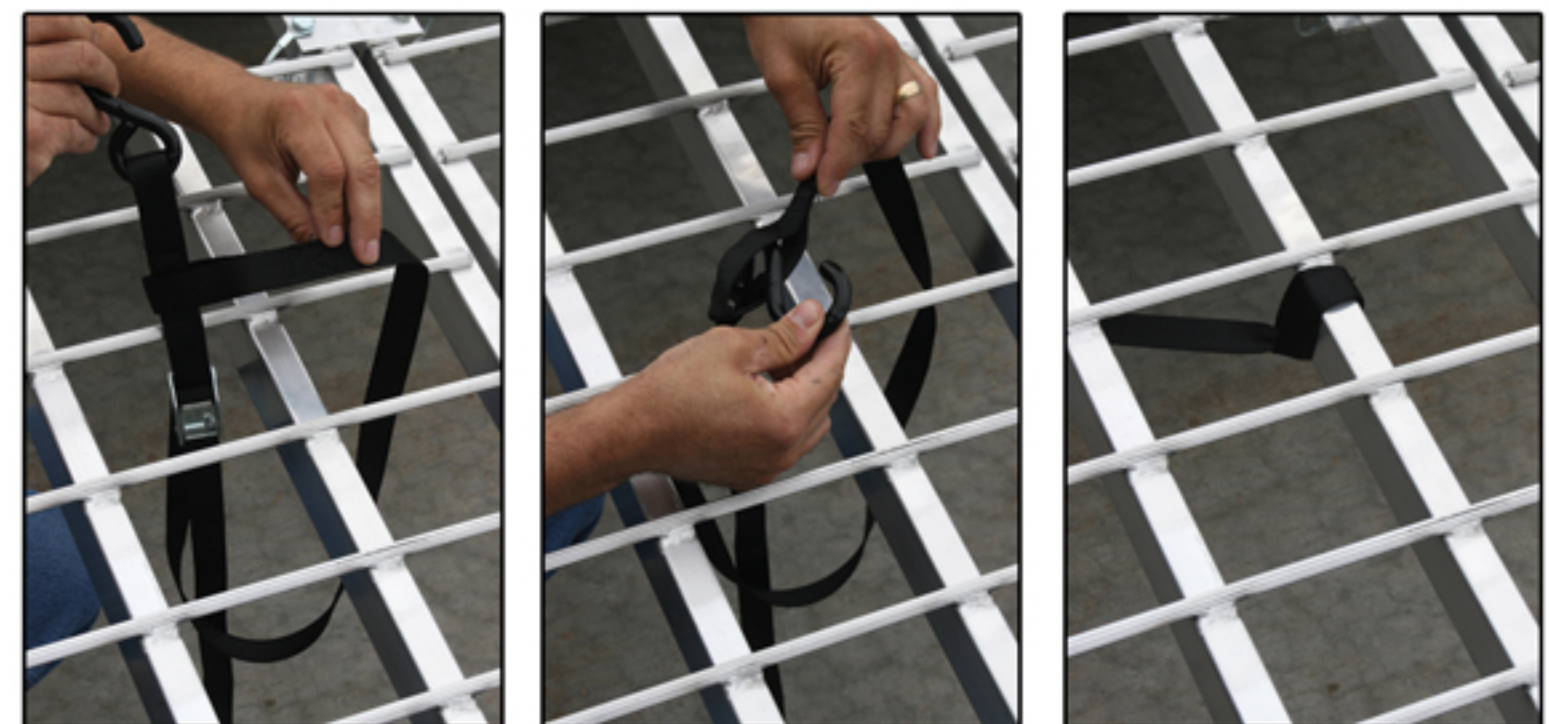


Figure 5

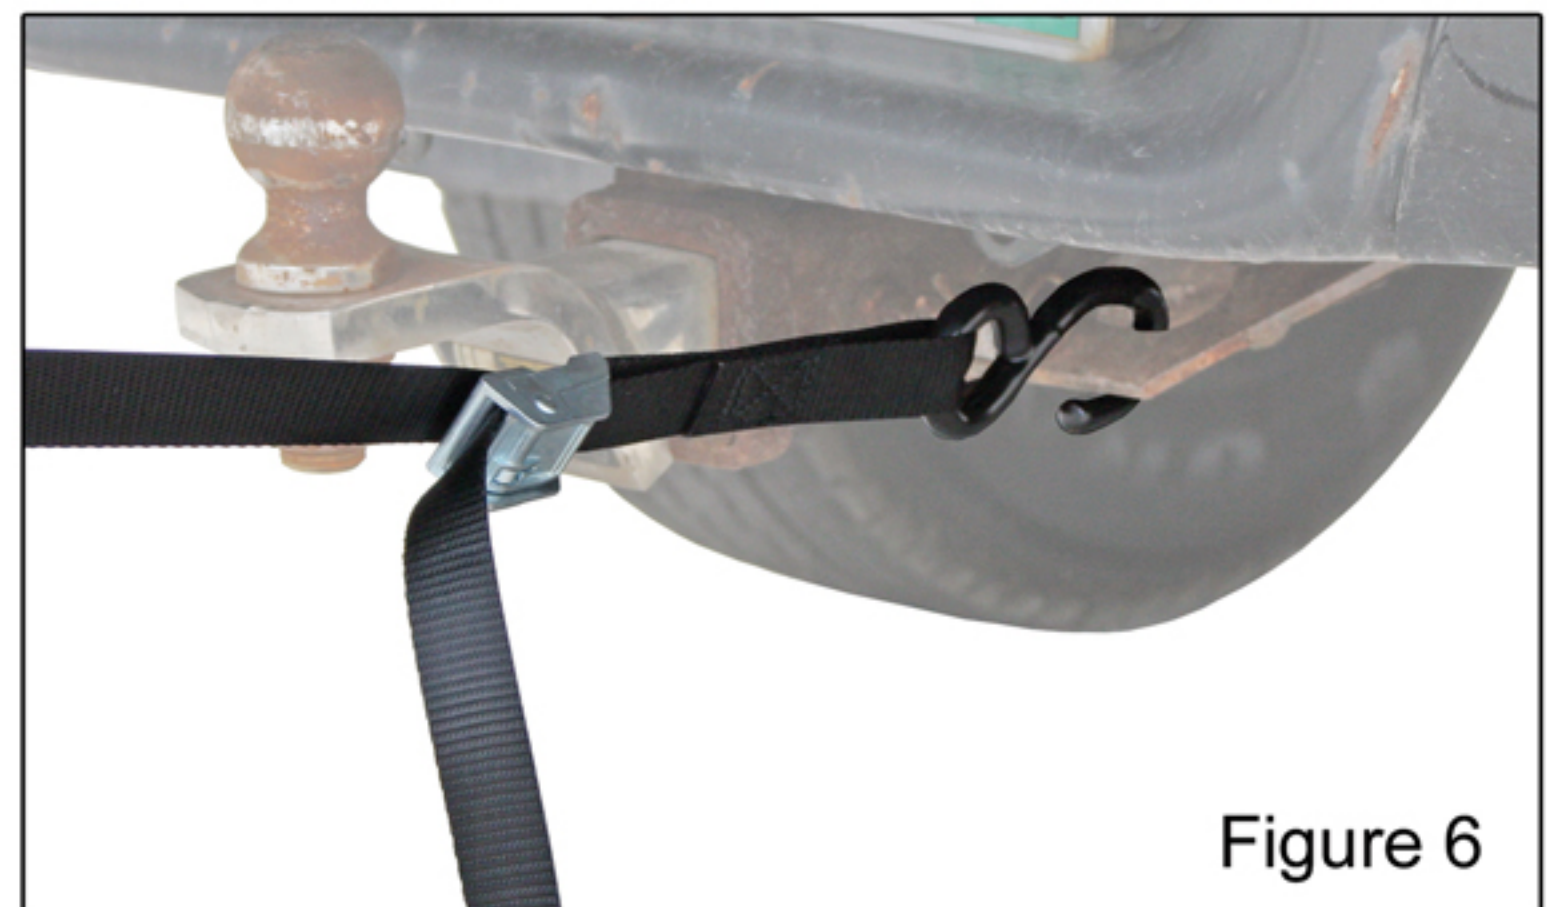


Figure 6