


BIKE PRO™

INTEGRATED TIE DOWN SYSTEM

Model 20122

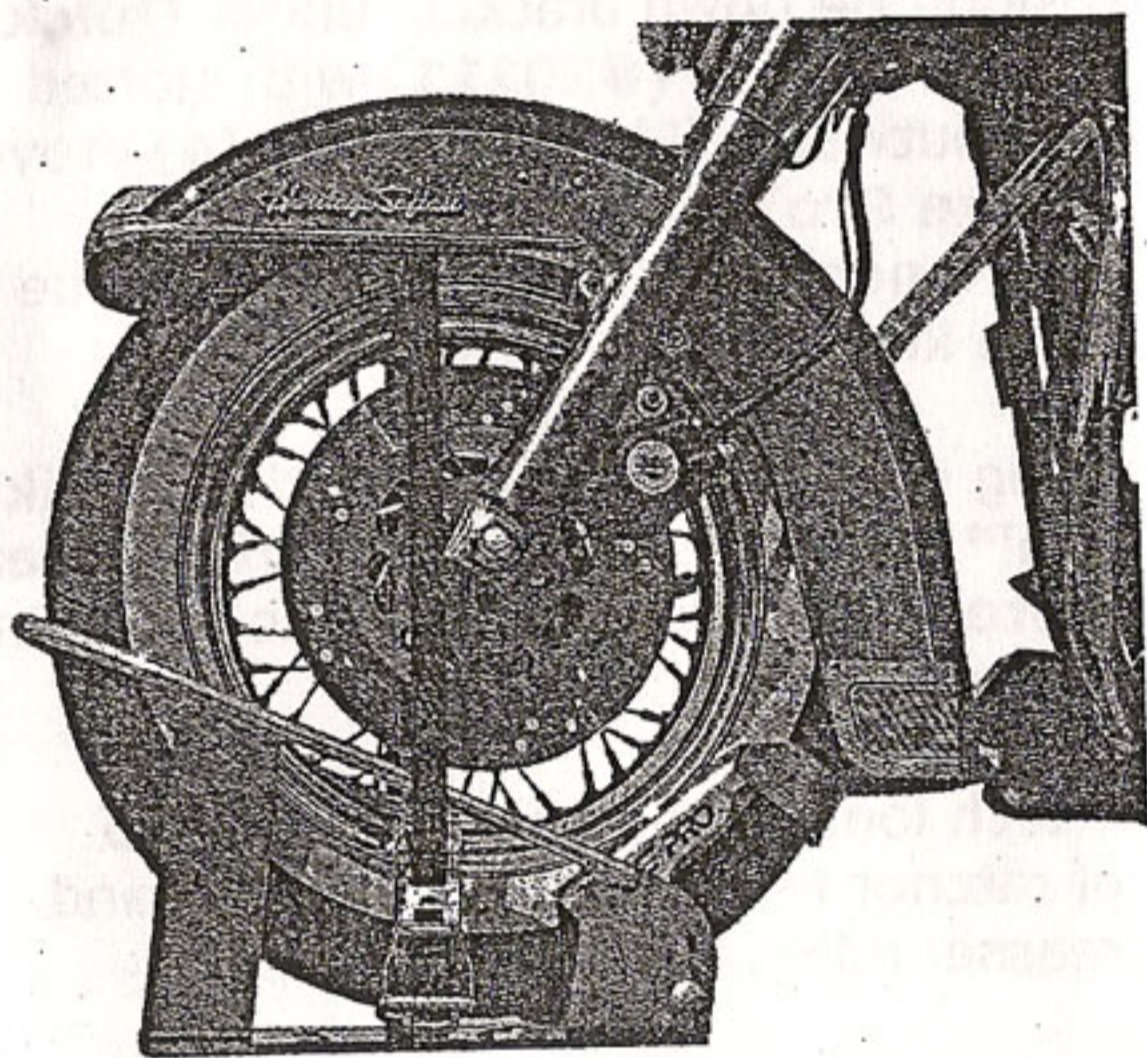

***Cushion your ride-no need
to compress forks!***


USE ONLY WITH MODEL 20106

1.800.434.5309

MADE IN CANADA

www.bike-pro.com

INSTALLATION INSTRUCTIONS

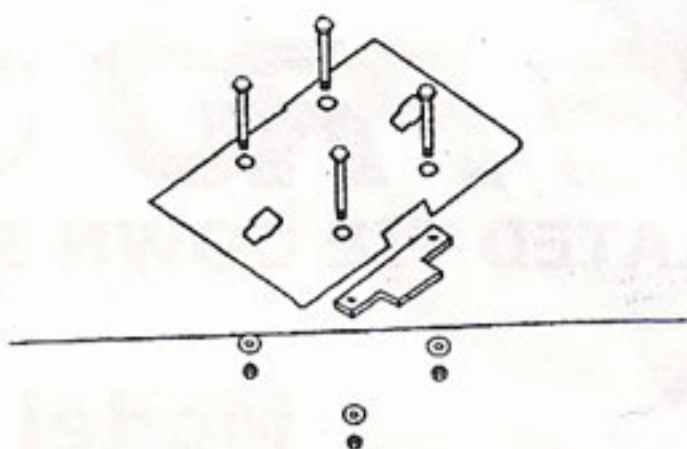

1. Position tie down brackets under **Quick Release Plate (#20111)** with slotted tabs outward. (Plastic Washers (4) provided in **Bike Pro™ (#20106)** hardware kit are not required when using this tie down kit.)
2. Using carriage bolts (4) provided in **Bike Pro™** hardware kit, secure **Quick Release Plate** and tie down brackets to mounting surface as shown above.
3. Attach loose strap hook to open end of ratchet by removing 5/16" bolt and reassembling through loop end.
4. Position strap over top of tire (between tire and fender) and secure hooks through tie down brackets slots.
5. Tighten ratchet strap until snug. Do not over tighten!
6. Check for strap clearance on rotor covers.
7. To remove strap, use thumb to click up on ratchet center release bar. Open ratchet completely to release strap tension.
8. Always remove strap completely before unloading bike.