
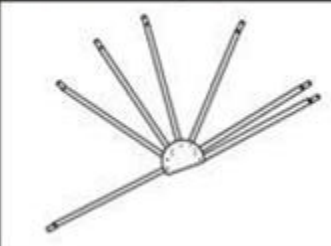
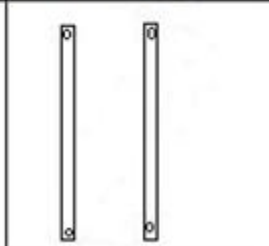
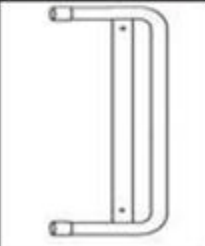

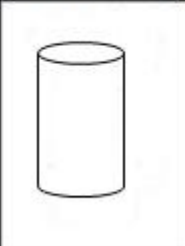
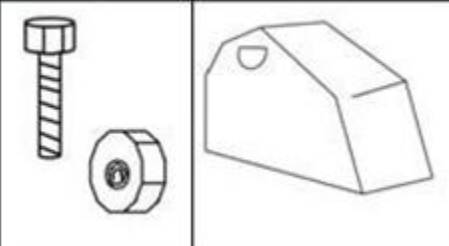


Ride Cover

Thank you for purchasing the best non-contact motorcycle cover. We take great pride in you choosing Ride Cover to protect your motorcycle. The Ride Cover will protect your motorcycle from rain, snow, hail, sun, scratches, and animals. We designed and continue to modify Ride Cover with the customer in mind. We would also like to inform you that Ride Cover donates 10% of annual profits to the Disable Veterans of America, we support those who support us and with your purchase you do as well. Once you have tried your Ride Cover we encourage you to send us feed back as well as photos of your motorcycle and your cover. Thank you again for your purchase.

Step 1: Parts Check


Side Frames (2 pcs - One with Locking Bar)	Side Braces (2 pcs)	Front Base (1 pc)	Top Frame (6 pcs)	Lock Tube (1 pc)	Accessory Packet	Cover
						

Step 2: Assembly

Note: Tools need will be a 5/16 wrench and a Philips head screw driver.

- Join both side frames by inserting 5 of the top frames to the tubes attached to each corresponding side frame as shown below. DO NOT attach either the base frame or top frame to either of the outer 2 tubes attached to each side frame at this time. Ensure that the detent button on each tube snaps into place into the top frame.
- Fold the cover in half (window over window for correct placement). This will allow you to find the seams that the outer 2 tubes on the side frame will slide through. Looking almost directly below the edge of the window, you will see a large gap in the seam. This is the area in which you will insert the tubes. Begin by only inserting the shorter of the two seams onto the shorter of the two tubes. There will be a gap in the seam that will line up with the hole that has been pre-drilled into the shorter tube. Once the cover has been inserted to both side frames, snap the base frame into place.
- Slide the locking tube over the left front side frame tube.
- Pull the cover over the frame and flip/rotate the entire cover to the front/other side.
- Slide the last remaining top tube through the seam in the end of the ride cover and snap into the last two remaining side tubes.
NOTE: The next 3 steps are done from inside the Ride Cover.
- 1 at a time, attach the Velcro straps located on the inside of the ride cover to the corners of each top tube. Ensure that the first free tube is attached to the first free set of Velcro straps, the 2nd to the 2nd, etc., until all tubes are attached. NOTE: You may want to place a weighted object on the front base or have someone hold it down.
- Connect the side braces to the holes in the front of the cover at the base frame and the first side frame as shown below using 4 bolts and 4 locking nuts provided in the accessory packet. Ensure that the rounded end of the side brace is down that the angled edge of the side brace matches the angle of the side tube as pictured below.
- Attach the front of the cover to the front base used the Velcro sewn into the base of the cover. This completes the assembly of the Ride Cover. Ensure that the ride cover is positioned where you want it. Anchoring the Ride Cover to a solid surface is highly encouraged. There are 6 anchors provided with this product (2 for each side frame and 2 for the front base).

Frame View

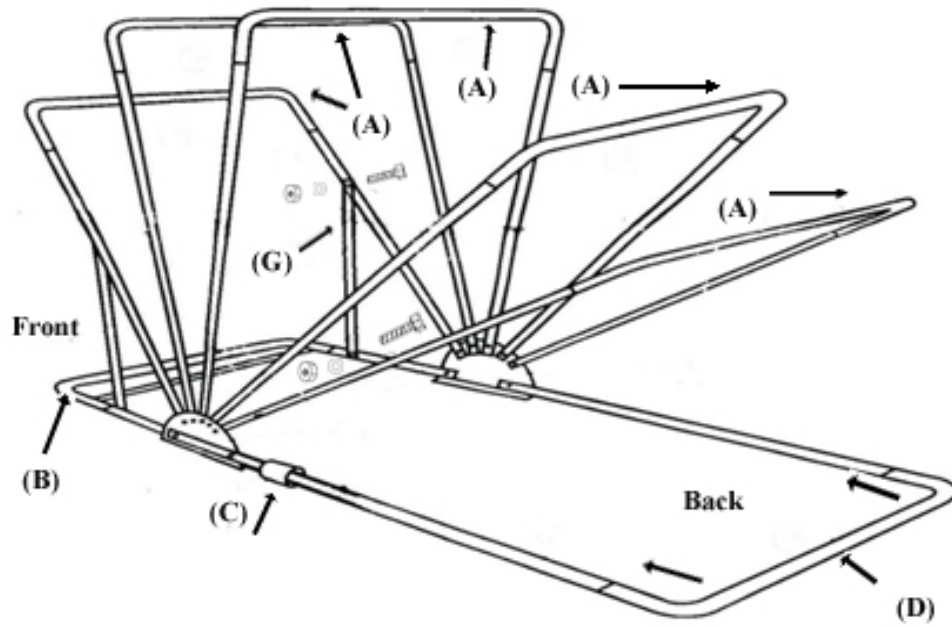

Seam Position Diagram

