


PET'S BARRIER DB-037215

INSTRUCTION MANUAL

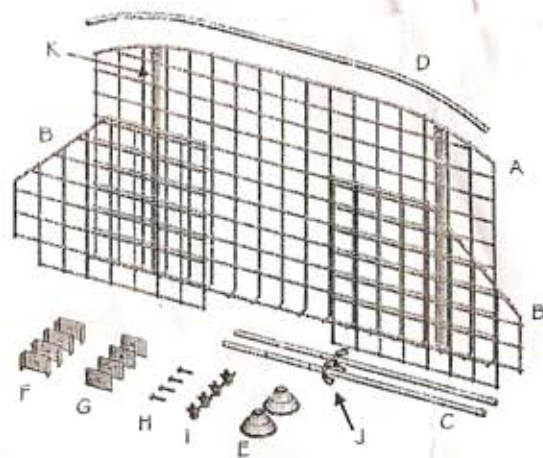

Parts List

Letter	Description	Quantity
A	Net tube	1
B	Wing(extension) panel	2
C	Threaded rods	2
D	Plastic protected strap	1
E	Support feet	2
F	Clamps(female)	4
G	Clamps(male)	4
H	Carnage bolts	4
I	Knobs	4
J	Wing nuts	2
K	Vertical upright tubes	2

STEP 1.

Locate the end of the threaded rods assembly(C). Press a support feet(E) onto this end.




STEP 2.

Insert the threaded rods(C) into the vertical upright tubes(K).

STEP 3.

Cover plastic protected strap(D) on the top of the net tube(A).

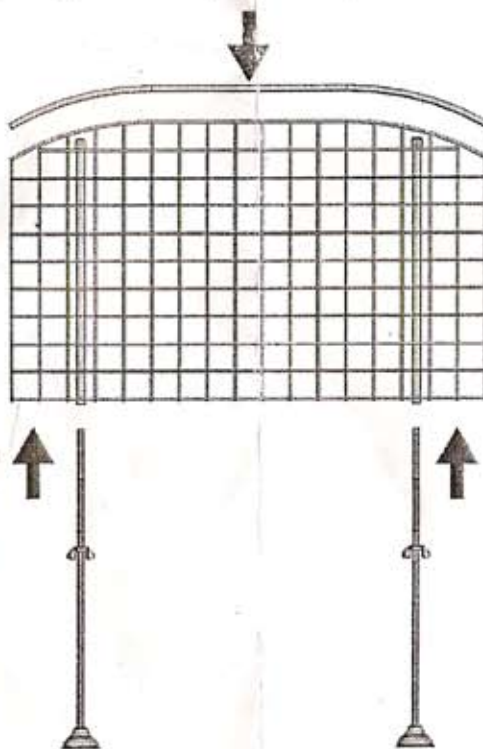


STEP 4-1.

(1) Put barrier in the back of your vehicle.

(2) Adjust the height of threaded rods.

Make support feet against the floor and the roof, Be sure the vertical tubes are perpendicular to the floor.

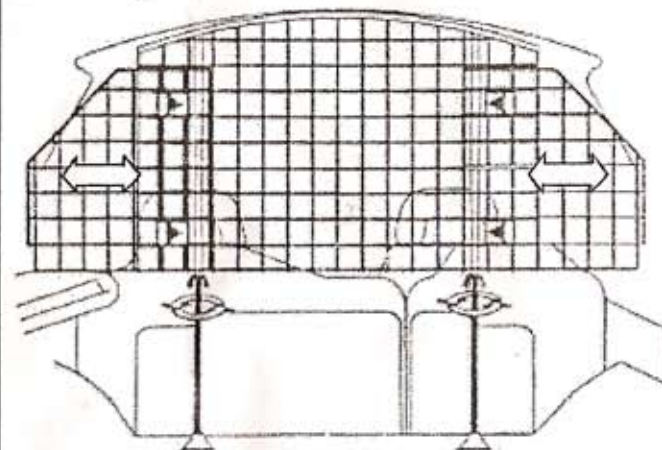

STEP 4-2.

Measure the width of the interior of your vehicle to determine how wide the wing(extension) panels(B) should be adjusted.

Assemble clamps(female)(F), clamp(Male)(G), Carnage bolts(I) and wing nuts(J) in order.

