

BC-219 Disc Brake Fork Instructions



In order to use the BC-219 Roof Bike Carrier to carry bicycles equipped with disc brakes, an adjustment to the front fork mount will need to be performed.



Start by removing the front fork skewer.




Once the skewer has been removed, use a flat head screwdriver to unscrew the front fork mount center tube end.



Remove the center tube end, and pull out the center tube itself.



Note the notches at the end of the center tube. Rotate the center tube 90°. This will ensure that these notches do not align with the pins inside the front fork mount housing. Reinsert the center tube. Screw on the center tube end, and reattach the fork skewer.

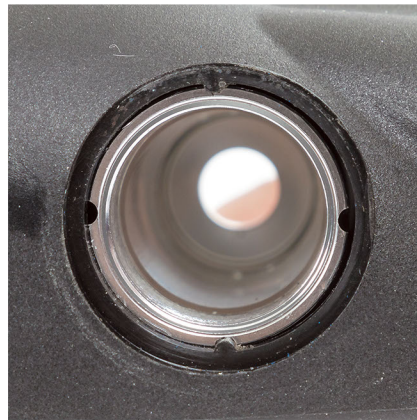

The center tube should now stick out from the front fork mount housing, enabling it to securely hold disc brake forks.