


# PLATED TRIPLE 7.5 FT RAMP KIT

---

PTRIPv2

311911.1

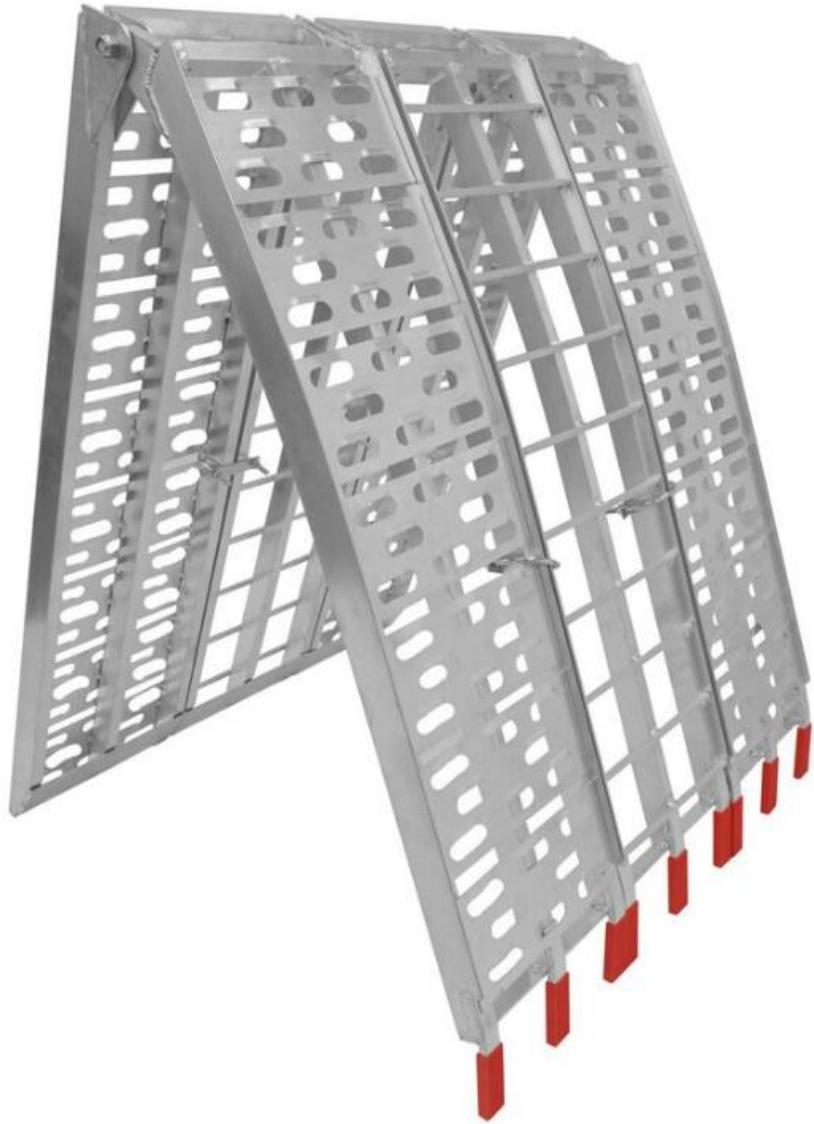

**TITAN**

R A M P S




## Operator's Manual

Read the Operator's Manual entirely. When you see this symbol, the subsequent instructions and warnings are serious follow without exception. Your life and the lives of others depend on it!

## PARTS DIAGRAM / EXPLODED VIEW

---

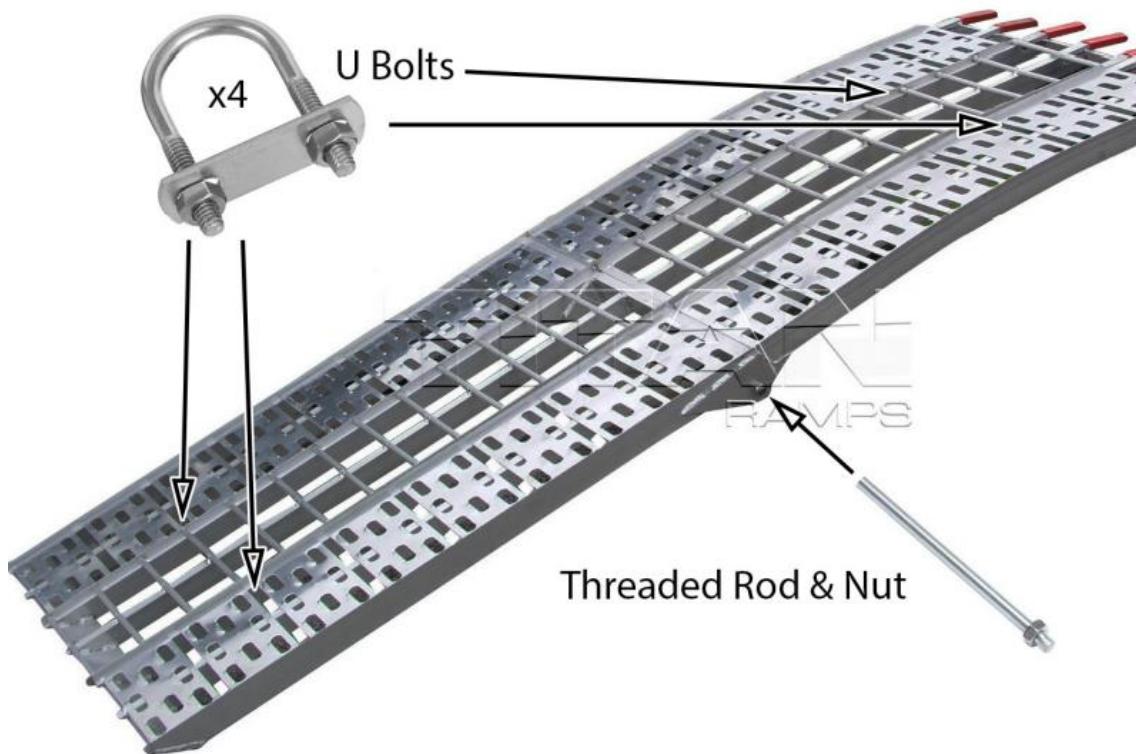

KEY	BOX	DESCRIPTION	QTY
(1)	1	FRAME	1
(2)	1	U BOLTS	4
(3)	1	BOLTS AND NUT	6

**SAFETY WARNING:** Maximum recommended loading height is 35" (22 degrees incline). Do not exceed this loading height. Do not exceed max Weight Capacity: 1000 LB.

## ASSEMBLY INSTRUCTIONS

---

- Unpack the ramp and lay all 3 sections of the ramp on a large surface as shown below.
- Remove the bolts in the hinge area of each ramp section
- Slide the rod into the hinge area of the ramp sections
- Place the nut on the threaded rod and tighten.

**NOTE:** Make sure the nut is all the way onto the rod or it may not function properly, and ma fall off during use.

- Fasten the U Bolts onto the ramp making sure that the nut side of the U Bolt is facing downward or away form the deck area of the ramp.
- Adjust the safety straps to fit your tailgate or trailer before each use.

**\*Do not use your ramp without attaching the safety straps!**

**NOTICE:** Your ramps may be used separately for loading many different items such as ATVs or Lawn Mowers. Simply replace the threaded rod with 6 Bolts and Nuts (included in packaging). Finally, remove the U Bolts to have 3 separate ramps.

## **ACKNOWLEDGEMENT OF RISK AND RELEASE OF LIABILITY**

---

The use of any equipment, including this one, involves the potential risk of injury. Apart from any warranty claim that might be presented for a claimed defect in material or workmanship of the product, you accept and assume full responsibility for any and all injuries, damages (both economic and non-economic), and losses of any type, which may occur, and you fully and forever release and discharge Titan, its insurers, employees, officers, directors, associates, and agents from any and all claims, demands, damages, rights of action, or causes of action, present or future, whether the same be known or unknown, anticipated, or unanticipated, resulting from or arising out of the use of said equipment.

This equipment must be used with care by capable and competent individuals under supervision, if necessary.

## **TITAN LIMITED WARRANTY: TERMS, EXCLUSIONS AND LIMITATIONS OF REMEDIES**

---

This product comes with a one (1) year limited warranty that can be found at [www.titanramps.com/warranty.html](http://www.titanramps.com/warranty.html). Please review the same for all details regarding the Titan Limited Warranty.

**THE TITAN LIMITED WARRANTY FOUND AT [WWW.TITANRAMPS.COM/WARRANTY.HTML](http://WWW.TITANRAMPS.COM/WARRANTY.HTML) IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE, EACH OF WHICH IS HEREBY DISCLAIMED.**