



## Instructions for MF1-EZ Series MF2-EZ Series MF3-EZ Series

### General Guidelines

- It is the user's responsibility to read and follow all instructions.
- Keep these instructions with the product at all times and review before each use.
- It is the responsibility of this product's owner to furnish the instructions to any person that borrows or purchases the product.
- Inspect the product before use to ensure it is assembled properly and all parts are in safe working order and free of defects.
- Never modify this product in any way.
- All circumstances cannot be addressed in these instructions. Please use common sense and practice general safety measures when using this product.
- Parts and/or instructions are subject to change without notice.

### Safety

- Never exceed maximum rated weight capacities of ramp(s).
- Never over-accelerate while loading. Operator must be in control of vehicle at all times. Loss of control could result in injury.
- The manufacturer and/or dealer is not responsible for any property damage or personal injury that occurs from improper use.

### Maintenance & Care


#### **Straps - Before each use:**

1. Check strap(s) for fraying and wear. Do not use damaged strap(s).
2. Keep out of direct sunlight.
3. If wet, dry thoroughly before storing.

#### **Ramps - Before each use:**

1. Check ramp(s), C-beam brackets, and spring pin clips for tightness.
2. Inspect ramps for damage. Do not use damaged or bent ramp(s).

# Parts

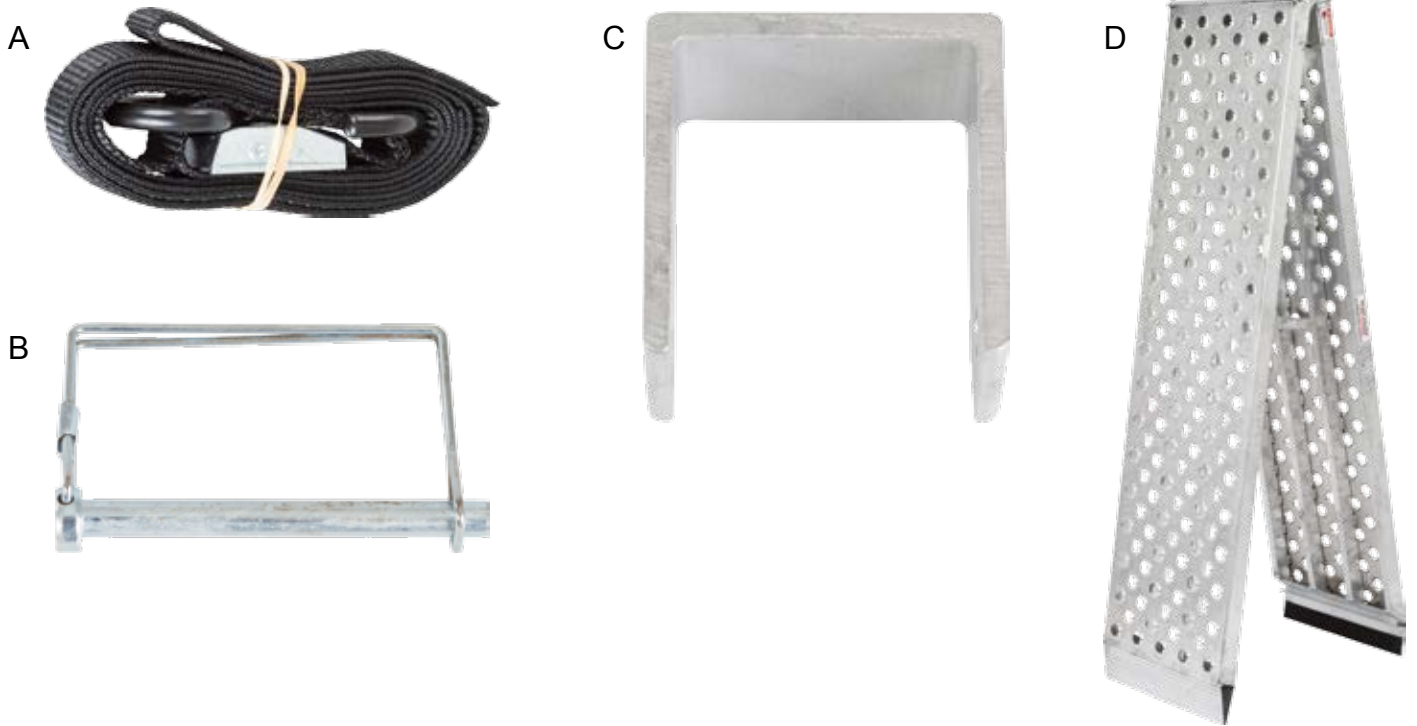

\*The spring pin clip and C-beam bracket for the MF1-EZ will ONLY be needed if you purchase an additional MF1-EZ ramp at a later time.

\*Dual runner ramp sets for ATVs may not include spring pin clip and C-beam bracket.

MF1-EZ Parts		
Part	Description	Quantity
A	Cam Buckle Strap	1
B	Spring Pin Clip	1
C	C-Beam Bracket	1
D	Ramp	1

MF2-EZ Parts		
Part	Description	Quantity
A	Cam Buckle Strap	2
B	Spring Pin Clip	2
C	C-Beam Bracket	2
D	Ramp	2

MF3-EZ Parts		
Part	Description	Quantity
A	Cam Buckle Strap	3
B	Spring Pin Clip	4
C	C-Beam Bracket	4
D	Ramp	3

# Assembly

1. Unfold and place one ramp on tailgate. (Fig. 1) For MF1-EZ models, skip ahead to Step 8.

2. Unfold and position the second ramp and place it next to the first ramp. (Fig. 2)

3. Place the C-beam brackets into the openings along the sides of the ramps, connecting them together. (Fig. 3a)

4. Lock each C-beam bracket in place with a spring clip pin. For MF2-EZ models, skip ahead to Step 8. (Fig. 3b, 3c)



Fig. 1

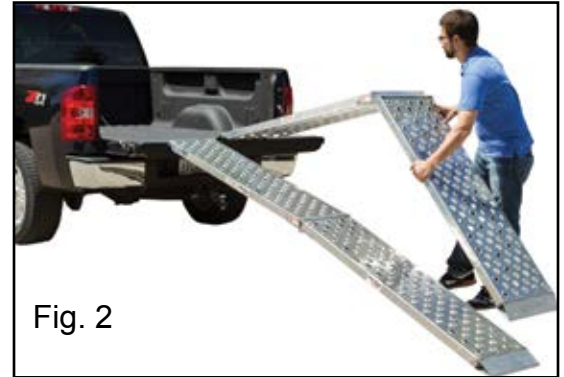


Fig. 2

Fig. 3a



Fig. 3b



Fig. 3c



5. Unfold and position the third ramp. (Fig. 4)

6. Connect the third ramp with the C-beam brackets. (Fig. 3a)

7. Lock each bracket in place with a spring clip pin. (Fig 3b, 3c)

8. Install a cam buckle safety strap for each ramp. See Maintenance & Care and Securing Ramp(s) sections for more information on proper safety strap installation and care.

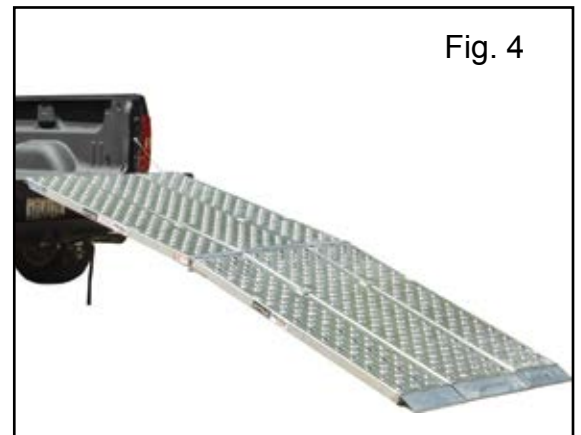


Fig. 4

# Preparation for Loading

1. Park truck or trailer on firm, flat ground.
2. Remove any obstructions from truck/trailer bed.
3. Check tailgate cables/brackets for damage or wear. If tailgate is not sturdy or cables are damaged, do not continue.
4. Unfold ramp(s) and place the ramp(s) snugly on the tailgate with the end plate lip overlapping the tailgate. (Fig. 5a)
5. The EZ-Rizer ramps may be used with the Alumi-Loc bracket (sold separately) to prevent ramp kick-out in the safest way. (Fig. 5b) See dealer for details.

Fig. 5a



Fig. 5b



# Securing Ramp(s)

1. Before each use, check strap(s) for fraying/wear. Do not use damaged strap(s).
2. Loop the strap around the bottom cross beam on the underside of the ramp. Loop the S-hook through the loop end. (Fig. 6a, 6b)
3. Pull the strap tight, cinching the loop around the cross beam. (Fig. 6c) Find a secure place to hook the safety strap. Trailer hitch chain loops or metal bumper supports are recommended. Hook the end of the strap to the vehicle/trailer. (Fig. 7a)
4. Tighten the strap securely (Fig 7b) and make sure the ramp is secure against the tailgate or trailer.
5. For MF2-EZ and MF3-EZ systems, repeat steps 1-4 with the second and third strap.
6. If using the Alumi-Loc ramp bracket, tie down safety straps are not required. See dealer for availability.

Fig. 6a



Fig. 6b



Fig. 6c




Fig. 7a



Fig. 7b

# Loading

1. **For MF1-EZ ramp** - With bike OFF and in NEUTRAL, slowly push the bike up the ramp. It is recommended to load a motorcycle with at least two people for single runner ramps. (Fig. 8a)
2. **For MF2-EZ and MF3-EZ ramp systems** - Start motorcycle. Position motorcycle to ride up the center of the ramp. Be ready to put your feet down in case of stall. Acceleration must be slow, smooth, and constant. (Fig. 8b)
3. Stop when motorcycle is in truck bed/trailer.
4. Secure motorcycle to truck/trailer. Remove ramp(s) and strap(s).

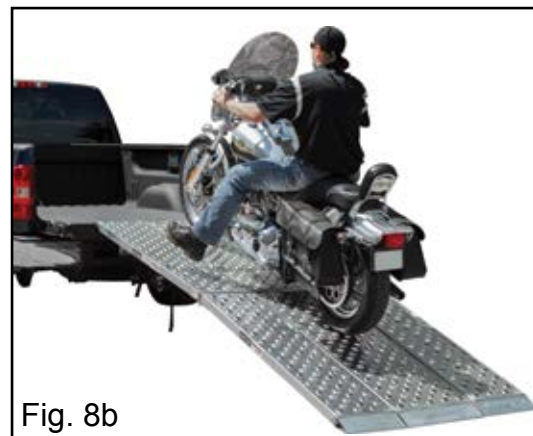

---

# Unloading

1. Follow steps from Loading and Securing Ramp(s) sections.
2. Clear the unloading area behind the ramp(s).
3. **For MF1-EZ ramp** - Put up kickstand. With bike OFF and in NEUTRAL, slowly walk the bike down the ramp, holding onto the handlebars, having another individual or two helping guide the bike down. (Skip ahead to Step 6.)
4. **For MF2-EZ and MF3-EZ ramp systems** - Sit on the motorcycle with one hand on the brake. Put up kickstand.
5. With motorcycle OFF and in NEUTRAL, slowly back down the ramp in a walking motion, feathering the brake.
6. Park the motorcycle. Remove ramp(s) and strap(s).

# Product Warranty and Liability

**GENERAL PRODUCT WARRANTY:** Products purchased from the Authorized Dealer (original place of purchase) or Merchant (“Dealer”) will be free of defects in material and workmanship at the time of receipt, and will meet the specifications stated at the place of purchase transaction or online at the Dealer’s website, under normal use and service when correctly installed, operated and maintained. This product warranty is effective for the period of time stated below, unless otherwise stated in the product instructions or depicted in the product advertisement. **All Authorized Dealer warranties are NON-TRANSFERABLE** and cover only the original end purchaser. This limited warranty does not cover products purchased through non-authorized dealers. Non-authorized dealer receipts are not accepted for warranty verification.

**\*\*\*Warranty claims must be made directly to the original place of purchase.\*\*\***

**WARRANTY PERIOD:** This warranty remains in force for one year from the date of the product’s accepted delivery. The Authorized Dealer offers a one year manufacturer’s warranty for most products unless otherwise specified on the product advertisement.

**WARRANTY SERVICE:** The Authorized Dealer will replace any defective or malfunctioning part at no charge, including payment of the shipping costs of parts or replacement product to and from the manufacturer. The purchaser is responsible for labor charges. If the product does not meet specifications as depicted in the advertisement, the Authorized Dealer will refund the full purchase price of the product.

Questions regarding the warranty on a specific product and warranty claims should be directed to the Authorized Dealer with whom the purchase transaction was made.

**WARRANTY LIMITATIONS:** The above warranty does not apply to products that are repaired, modified or altered by any party other than the Authorized Dealer; are subjected to unusual physical stress or conditions (such as overloaded ramps or corrosion), natural disaster, governmental actions, wars, strikes, labor disputes, riots, theft, vandalism, terrorism or any reason beyond reasonable control; are damaged due to improper installation, misuse, abuse, accident or negligence in use, storage, transportation or handling, or tampering; or to products that are considered consumable items or items requiring repair or replacement due to normal wear and tear.

Product should be inspected prior to signing for delivery. Product damage incurred during shipping, unless noted on the Bill of Lading at the time of delivery, renders this warranty void.

**LIMITED LIABILITY:** In no event shall THE AUTHORIZED DEALER be liable to the purchaser or any third party for any indirect, incidental, consequential, special, exemplary or punitive damages arising out of the use of the product, including, without limitation, property damage, loss of value of the product or any third party products that are used in or with the product, or loss of use of the product or any third party products that are used in or with the product.